C920a (NA)

Roof opening panel motor assembly (15790)

F01237

Pin	Circuit	Circuit function
1	WH	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)

C920b (NA)

Roof opening panel motor assembly (15790)

F01237

Pin	Circuit	Circuit function
1	YE	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)

C921a (BK)

Roof opening panel module (502D70)

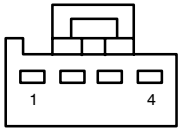

F04153

Pin	Circuit	Circuit function
1	BK	Ground
2	WH	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)
3	BK/LB	Accessory relay, switched power, output
4	YE	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)

C921b (NA)

Roof opening panel module (502D70)

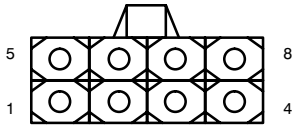

F08335

Pin	Circuit	Circuit function
1	BK	Ground
2	WH	Roof opening panel switch (15B691), Open / Down, output
3	PK	Roof opening panel switch (15B691), feed
4	–	not used
5	TN	Roof opening panel switch (15B691), Close / Up, output
6	OG	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)
7	BN	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)
8	GN	Roof opening panel module (502D70), to, Roof opening panel motor assembly (15790)