C340 (GY)

14A005

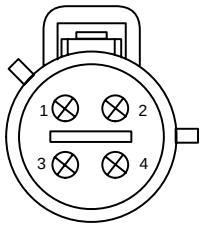

14B084

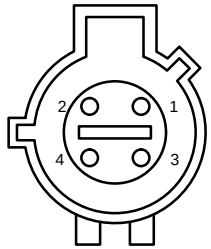

F04075

(1) 1153 (RD/BK)
(2) 295 (LB/PK)
(3) 51 (BK/WH)
(4) 57 (BK)

C341a (GY)

14A699

Driver seat module (14C718)

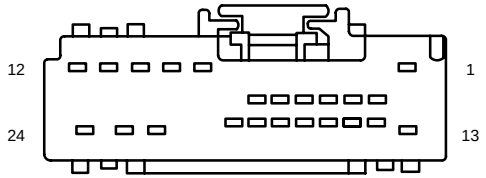

F24021

Pin	Circuit	Circuit function
1	1469 (RD/LB)	Driver seat module (14C718), to, Power seat motor assembly, left
2	–	not used
3	1467 (GY/YE)	Rear up/down circuit
4	1468 (GY/LB)	Rear up/down circuit
5	442 (LG/OG)	Seat position sensor – horizontal sense
6	443 (LG/RD)	Driver memory seat front height sensor, monitor
7	1463 (RD/YE)	Power seat switch, left, to, Driver seat module (14C718)
8	–	not used
9	1474 (RD/LG)	Driver seat module (14C718), to, Power seat motor assembly, left
10	1489 (LB/BK)	Driver seat module (14C718), to, Adjustable pedal motor (2C429)

Pin	Circuit	Circuit function
11	1471 (RD/WH)	Driver seat module (14C718), to, Power seat motor assembly, left
12	1490 (LB/OG)	Driver seat module (14C718), to, Adjustable pedal motor (2C429)
13	447 (OG/RD)	Sensor, return
14	1465 (GY/WH)	Seat rearward, signal
15	1466 (GY/OG)	Seat Forward signal
16	1464 (YE)	Front up/down circuit
17	444 (LG/BK)	Driver memory seat rear height sensor, monitor
18	–	not used
19	446 (OG/WH)	Sensor, feed
20	–	not used
21	–	not used
22	1472 (YE/WH)	Driver seat module (14C718), to, Power seat motor assembly, left
23	1473 (YE/LG)	Driver seat module (14C718), to, Power seat motor assembly, left
24	1470 (YE/LB)	Driver seat module (14C718), to, Power seat motor assembly, left