C341d (BK)

14A699

Driver seat module
(14C718)



F02476

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	566 (DG)	Voltage supplied at all times (overload protected)

C342 (GN)

14A699

Seat heater switch,
passenger side

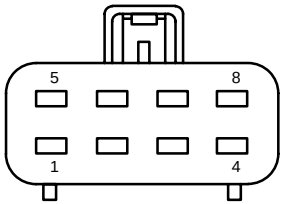

F08209

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	581 (RD)	Heated seats, On/Off signal
3	–	not used
4	461 (OG)	indicator, Heated seats, control
5	–	not used
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	–	not used
8	–	not used

C344 (GN)

14A699

Seat heater switch,
driver side

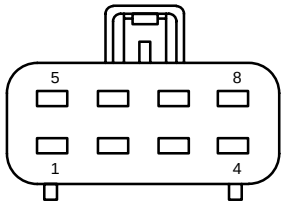

F08209

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	1020 (DG/VT)	Heated seats, On/Off signal
3	–	not used
4	461 (OG)	indicator, Heated seats, control
5	–	not used
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	–	not used
8	–	not used

C356 (BK)

14A699

Seat track position
sensor, left

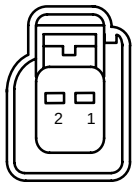

F02132

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Sensor signal return (reference/ground)
2	1520 (LG)	Sensor signal, feed