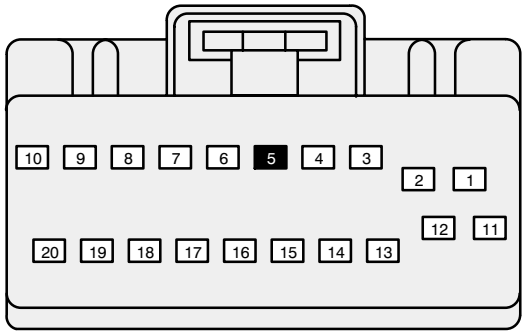

C322

DRIVER TEMPERATURE CONTROLLED SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1064 (YE/LB)	Element Feed
2	1065 (WH/LB)	Element Return
3	1553 (BK)	Module to Motor
4	1255 (WH/RD)	Driver Seat Enable
5	–	NOT USED
6	1551 (PK/WH)	Switch to Module
7	1018 (LG/OG)	Driver Temp Adjust (+)
8	1061 (GY/LB)	NOT USED
9	1063 (OG/LB)	NOT USED **REVISED**
10	1565 (VT)	FAN TACH
11	1066 (GY/LB)	Element Feed
12	1067 (VT/LB)	Element Return
13	1552 (RD)	Module to Motor
14	1554 (WH)	Module to Fan
15	1019 (TN/LB)	Driver Temp Adjust (–)
16	1550 (WH/OG)	Switch to Module
17	1060 (BK/LB)	Seat Sensor Feed
18	1548 (DG/LG)	Module to Seat Temp Sensor
19	1549 (DB/OG)	Module to Back Temp Sensor
20	1062 (RD/LB)	Back Sensor Feed

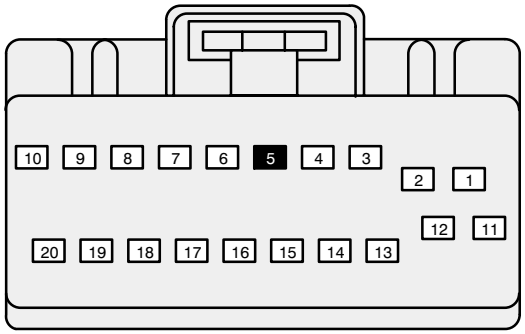

C323

PASSENGER TEMPERATURE CONTROLLED SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1064 (YE/LB)	Element Feed
2	1065 (WH/LB)	Element Return
3	1553 (BK)	Module to Motor
4	1255 (WH/RD)	Passenger Seat Enable
5	–	NOT USED
6	1551 (PK/WH)	Switch to Module
7	1018 (LG/OG)	Passenger Temp Adjust (+)
8	1061 (GY/LB)	NOT USED
9	1063 (OG/LB)	NOT USED
10	1565 (VT)	FAN TACH
11	1066 (GY/LB)	Element Feed
12	1067 (VT/LB)	Element Return
13	1552 (RD)	Module to Motor
14	1554 (WH)	Module to Fan
15	1019 (TN/LB)	Passenger Temp Adjust (–)
16	1550 (WH/OG)	Switch to Module
17	1060 (BK/LB)	Seat Sensor Feed
18	1548 (DG/LG)	Module to Seat Temp Sensor
19	1549 (DB/OG)	Module to Back Temp Sensor
20	1062 (RD/LB)	Back Sensor Feed