C2099

14401

N475
Passenger Air bag
Deactivation (PAD)
switch

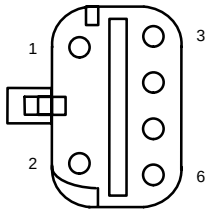

F06263

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	9-JA26 (BN/YE)	Sensor signal return (reference/ground)
4	75-JA26 (YE/BK)	Voltage: Ignition switch in Accessory or Run
5	8-JA26 (WH/BK)	Sensor signal
6	31-JA26 (BK/RD)	Ground

C2138

14401

N489
Convertible top
switch

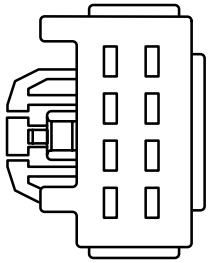
F08193

Pin	Circuit	Circuit Function
1	31-LE15 (BK/GN)	Ground
2	–	not used
3	8-AG15 (WH/RD)	Sensor signal
4	31-AG15 (BK/BU)	Ground
5	64-LK15 (BU/WH)	Variable D.C. voltage (not overload protected)
6	–	not used
7	10-AG15 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
8	–	not used

C2152a

14A005

R87
Heated wiper park

F01031

Pin	Circuit	Circuit Function
1	31-HB12 (BK/YE)	Ground