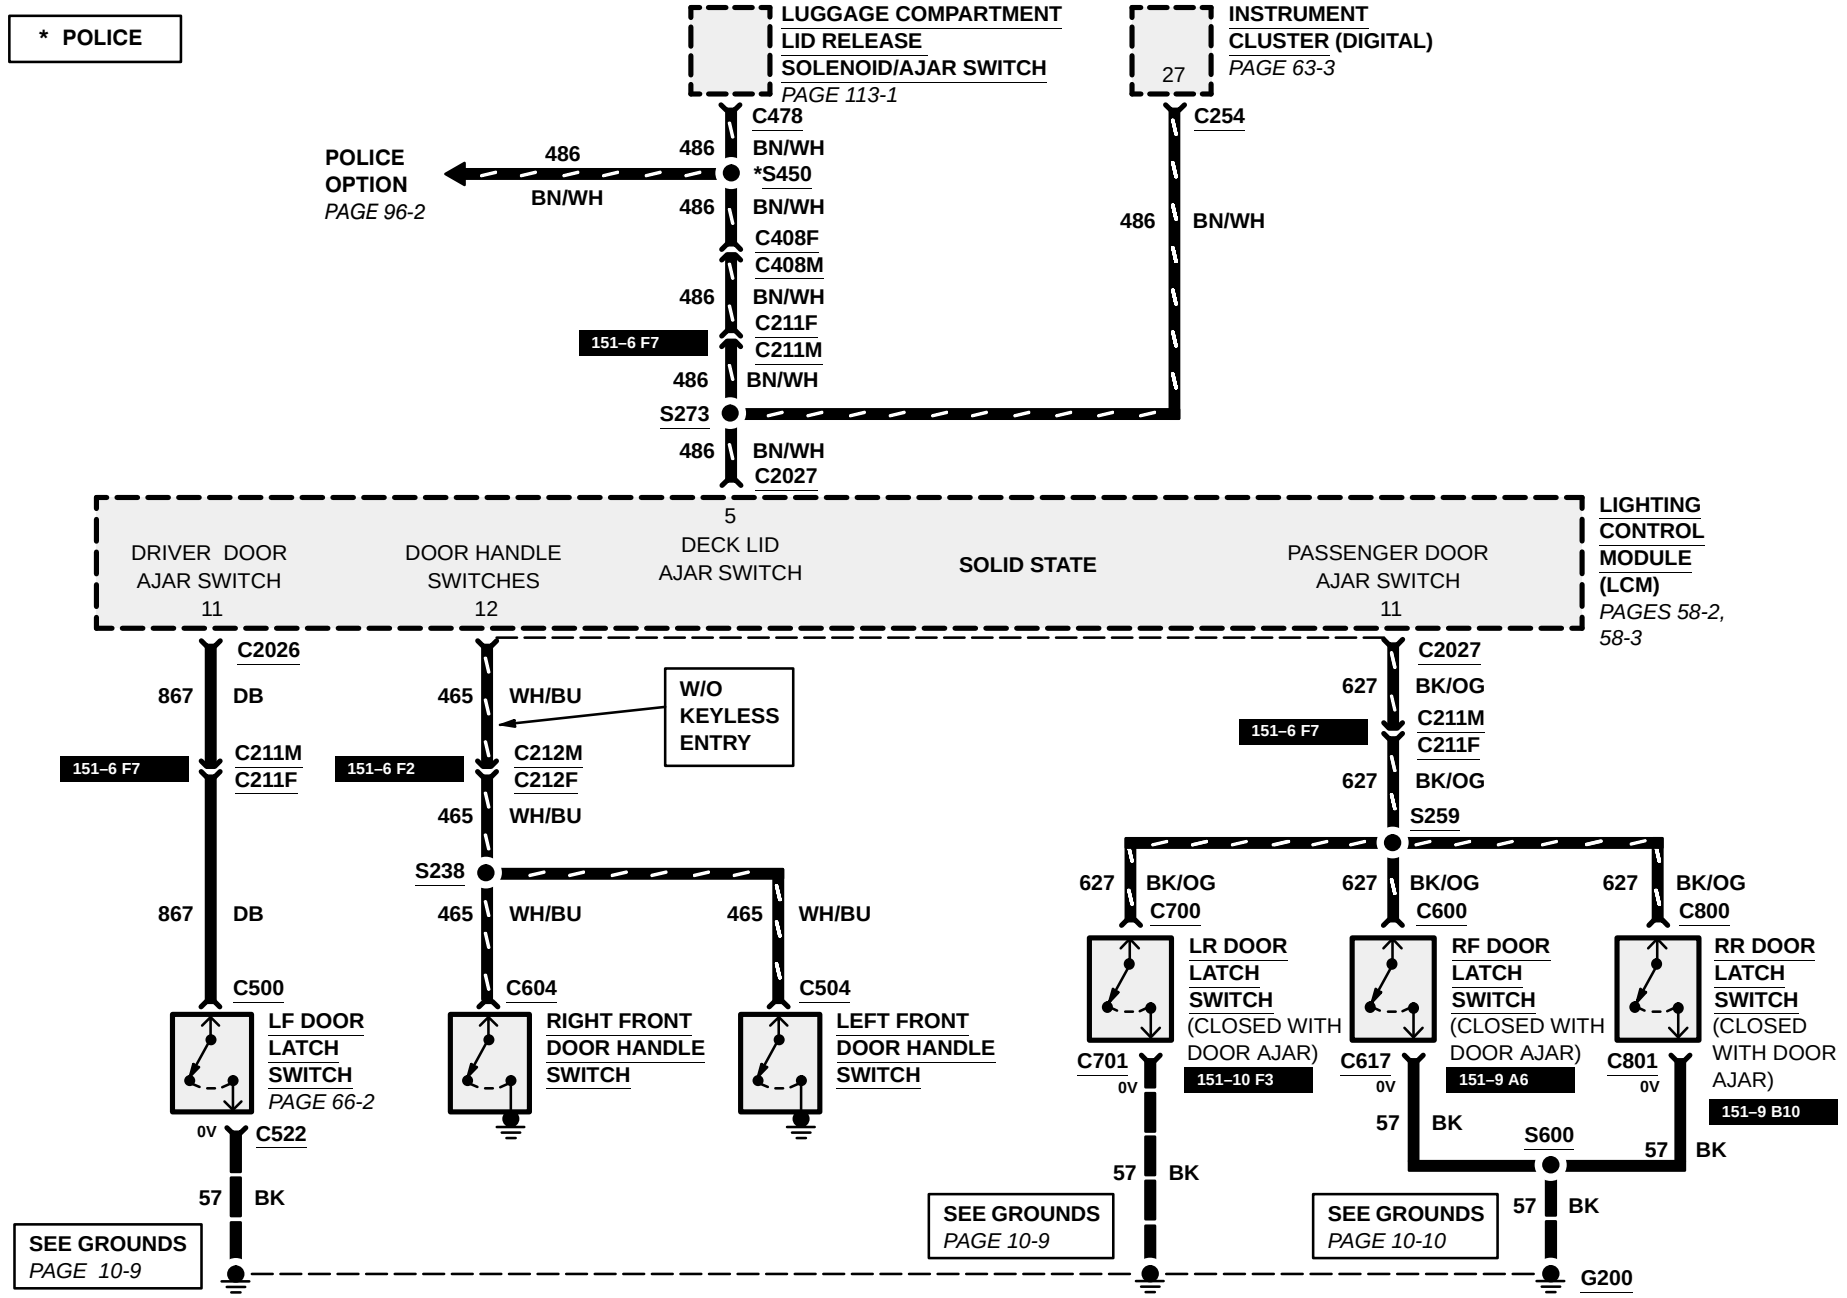
* POLICE
LUGGAGE COMPARTMENT LID RELEASE SOLENOID/AJAR SWITCH
PAGE 113-1
INSTRUMENT CLUSTER (DIGITAL)
PAGE 63-3
27
C478
C254
POLICE OPTION
PAGE 96-2
486 BN/WH
*S450
C408F
C408M
C211F
C211M
151–6 F7
S273
C2027
5
DRIVER DOOR AJAR SWITCH
11
DOOR HANDLE SWITCHES
12
DECK LID AJAR SWITCH
SOLID STATE
PASSENGER DOOR AJAR SWITCH
11
LIGHTING CONTROL MODULE (LCM)
PAGES 58-2, 58-3
C2026
867 DB
C212M
C212F
151–6 F2
465 WH/BU
W/O KEYLESS ENTRY
627 BK/OG
S238
S259
C700
C600
C800
C500
C604
C504
LF DOOR LATCH SWITCH
PAGE 66-2
RIGHT FRONT DOOR HANDLE SWITCH
LEFT FRONT DOOR HANDLE SWITCH
LR DOOR LATCH SWITCH (CLOSED WITH DOOR AJAR)
RF DOOR LATCH SWITCH (CLOSED WITH DOOR AJAR)
RR DOOR LATCH SWITCH (CLOSED WITH DOOR AJAR)
151–10 F3
151–9 A6
151–9 B10
C701
C617
C801
0V
57 BK
S600
G200
SEE GROUNDS PAGE 10-9
SEE GROUNDS PAGE 10-10
SEE GROUNDS PAGE 10-9