C3077b

14B079

A267
Rear Seat Entertainment (RSE) module

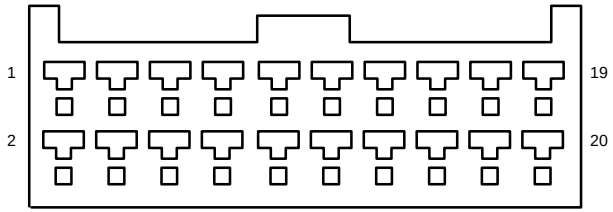

F20011

Pin	Circuit	Circuit function
1	(WH)	Audio signal positive, Left, input
2	(WH)	CDDJ Audio signal positive, Left
3	(BK)	Audio signal negative, Left, input
4	(BK)	CDDJ Audio signal negative, Left
5	(RD)	Audio signal positive, Right, input
6	(GN)	CDDJ Audio signal negative, Right
7	(GN)	Audio signal negative, Right, input
8	(RD)	CDDJ Audio signal positive, Right
9	–	not used
10	–	not used
11	–	not used
12	(RD)	VCP video +
13	–	not used
14	(RD)	VCP Audio signal positive, Left
15	–	not used
16	(RD)	VCP Audio signal positive, Right
17	–	not used
18	(RD)	VCP video + output
19	–	not used
20	–	not used

C3084

14405
14408

E260
Running board lamp, left front

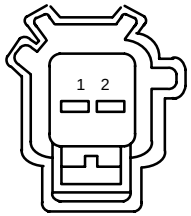

F02377

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	667 (WH/RD)	Interior lamp relay, switched power, output

C3085

14405
14408

E261
Running board lamp, left rear

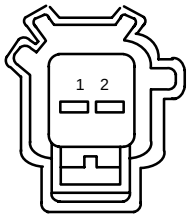

F02377

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	667 (WH/RD)	Interior lamp relay, switched power, output

C3086

14405
14408

E262
Running board lamp, right front

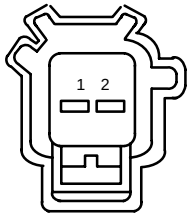

F02377

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	667 (WH/RD)	Interior lamp relay, switched power, output