C606

14A005

E178
Door entry lamp,
right front (13776)

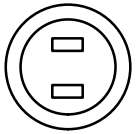

F02063

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground

C612

19A123/14A005

Y18
Speaker, right front
(18808)

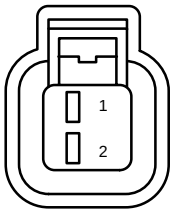

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

C622a

14A005

M260
Exterior rear view
mirror, right

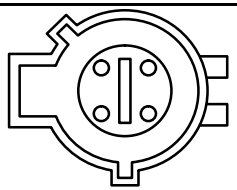

F04075

Pin	Circuit	Circuit function
1	542 (YE)	Mirror motor, feed
2	543 (DG)	Voltage supplied at all times (overload protected)
3	–	not used
4	544 (VT)	Up/Down mirror movement, Right

C622b

14A005

M260
Exterior rear view
mirror, right



F02062

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	59 (DG/VT)	Fused rear window defrost relay, switched power

C623

14A005

M244
Power window mo-
tor, right front



F02457

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Up