C175 (GY)

12A522

Powertrain Control Module (PCM) (12A650)

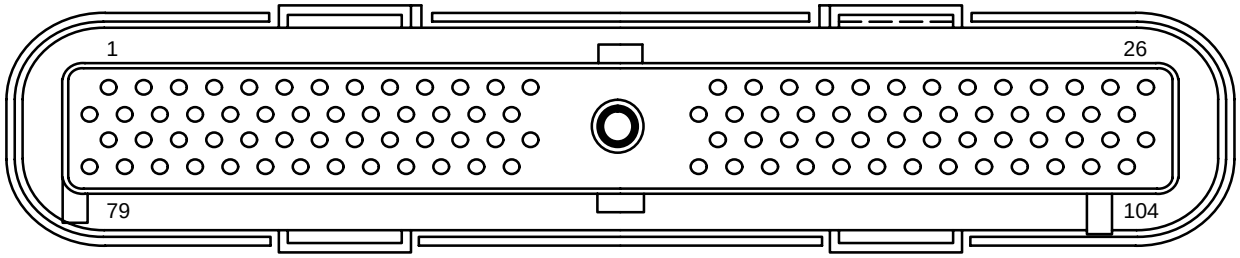

F104001

Pin	Circuit	Circuit function
1	1028 (WH/PK)	Coil On Plug (COP) 4 (12029), control – Duratec
	315 (VT/OG)	Shift solenoid B – ZETEC
2	–	not used
3	1202 (BN/LG)	Ground – Duratec
4	–	not used
5		not used
6	237 (OG/YE)	Shift solenoid A – Duratec
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	315 (VT/OG)	Shift solenoid B – Duratec
12	–	not used
13	107 (VT)	Flash/EEPROM power supply
14	–	not used
15	915 (PK/LB)	SCP Bus –
16	914 (TN/OG)	SCP Bus +
17	168 (RD/BK)	RX, signal – Duratec
	228 (DB)	High speed fan control relay 1, control – ZETEC
18	167 (BN/OG)	TX, signal – Duratec
19	167 (BN/OG)	TX, signal – ZETEC
20	971 (PK/BK)	3–2T/CCS, signal – Duratec
	557 (BN/YE)	Fuel injector 3, control – ZETEC
21	138 (BK/PK)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) +
22	139 (GY/YE)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) –

Pin	Circuit	Circuit function
23	1202 (BN/LG)	Ground – ZETEC
24	57 (BK)	Ground
25	570 (BK/WH)	Ground
26	1024 (LG/WH)	Coil On Plug (COP) 1 (12029), control – Duratec
	1030 (DG/VT)	Ignition coil (12029) – ZETEC
27	1026 (PK/WH)	Coil On Plug (COP) 5 (12029), control – Duratec
	325 (DB/OG)	Starter relay (11450), control – ZETEC
28	288 (DB)	Low speed fan control relay, control – Duratec
	679 (GY/BK)	Vehicle Speed Sensor (VSS) + – ZETEC
29	665 (OG/YE)	Overdrive cancel switch (7G550), signal
30	–	not used
31	330 (YE/LG)	Power steering pressure switch, input
32	311 (DG/VT)	Knock sensor (12A699) – Duratec
33	1202 (BN/LG)	Ground – ZETEC manual transmission
34	20 (WH/LB)	Turbine shaft speed sensor (7M101) – ZETEC
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 (9G444), input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input – Duratec
	354 (LG/RD)	Cylinder head temperature sensor, input – ZETEC
39	470 (PK/BK)	Sensor signal return (reference/ground)
40	238 (DG/YE)	Fuel pump relay, switched power, output
41	198 (DG/OG)	Dual pressure switch (19D594), signal
42	3886 (BK)	Medium speed fan control relay, control – Duratec
43	3886 (BK)	Medium speed fan control relay, control – ZETEC

Pin	Circuit	Circuit function
44	325 (DB/OG)	Starter relay (11450), control – Duratec, Automatic
45	–	not used
46	386 (LB)	High speed fan control relay 1, control – Duratec
47	585 (VT)	EGR vacuum regulator solenoid valve, control – Duratec
48	–	not used
49	–	not used
50	–	not used
51	57 (BK)	Ground
52	1030 (DG/VT)	Coil On Plug (COP) 2 (12029), control – Duratec
	1024 (LG/WH)	Ignition coil (12029) – ZETEC
53	1021 (LG/YE)	Coil On Plug (COP) 6 (12029), control – Duratec
	168 (RD/BK)	RX, control – ZETEC
54	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid – Duratec
	926 (LB/OG)	Fuel pump relay, control – ZETEC
55	16 (RD/LG)	Voltage supplied at all times (overload protected)
56	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), Vapor management valve
57	310 (YE/RD)	Knock sensor (12A699)
58	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103), input – automatic transmission
	136 (DB/YE)	Vehicle Speed Sensor (VSS), input – manual transmission
59	20 (WH/LB)	Turbine shaft speed sensor (7M101) – Duratec
	921 (GY/OG)	Generator, to, Powertrain Control Module (PCM) (12A650) – ZETEC
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22 (9G444), input – Duratec
62	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
63	–	not used
64	199 (LB/YE)	Transmission Range (TR) sensor Powertrain Control Module (PCM) (12A650)
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	–	not used
67	91 (VT/WH)	Canister vent
68	679 (GY/BK)	Vehicle Speed Sensor (VSS) + – Duratec
	386 (LB)	Low speed fan control relay, control – ZETEC

Pin	Circuit	Circuit function
69	331 (PK/YE)	A/C clutch relay, control
70	555 (TN)	Fuel injector 1, control – ZETEC
71	100 (WH/RD)	PCM power relay, output
72	920 (BN/WH)	Generator, to, Powertrain Control Module (PCM) (12A650) – ZETEC
73	559 (TN/BK)	Fuel injector 5, control – Duratec
	237 (OG/YE)	Shift solenoid A – ZETEC
74	557 (BN/YE)	Fuel injector 3, control – Duratec
75	555 (TN)	Fuel injector 1, control – Duratec
76	57 (BK)	Ground
77	57 (BK)	Ground – ZETEC
78	1025 (OG/YE)	Coil On Plug (COP) 3 (12029), control – Duratec
79	585 (VT)	EGR vacuum regulator solenoid valve, control – ZETEC
80	926 (LB/OG)	Fuel pump relay, control – Duratec
81	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid
82	–	not used
83	264 (WH/LB)	Idle air control valve (IAC) (9F715), control
84	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103) – Duratec, Automatic
	136 (DB/YE)	Vehicle Speed Sensor (VSS) – Duratec, Manual
85	282 (DB/OG)	Camshaft position sensor (6B288), input
86	347 (BK/YE)	Dual pressure switch (19D594), signal
87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
	311 (DG/VT)	Knock sensor (12A699) – ZETEC
88	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
89	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
90	351 (BN/WH)	Reference, voltage
91	89 (OG)	signal, return
92	511 (LG)	Brake pedal position switch (13480), input
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater – Duratec
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater – Duratec
	558 (BN/LB)	Fuel injector 4, control – ZETEC

Pin	Circuit	Circuit function
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 (9G444), heater – Duratec
	556 (WH)	Fuel injector 2, control – ZETEC
97	100 (WH/RD)	PCM power relay, output
98	–	not used
99	560 (LG/OG)	Fuel injector 6, control – Duratec
	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid – ZETEC
100	558 (BN/LB)	Fuel injector 4, control – Duratec
	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater – ZETEC
101	556 (WH)	Fuel injector 2, control – Duratec
102	971 (PK/BK)	3–2T/CCS, signal – ZETEC
103	57 (BK)	Ground
104	–	not used