C320

14C719

Seat heater switch, driver side

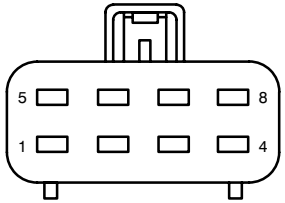

F08209

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	1020 (DG/VT)	Seat heater switch, driver side, to, Heated seat module, driver side front, Enable
3	–	not used
4	57 (BK)	Ground
5	–	not used
6	1255 (WH/RD)	Heated seat switch, driver side, Heated seat module, driver side front, to, Enable
7	–	not used
8	235 (RD/BK)	Instrument illumination +

C321 (LG)

14A699

Seat heater switch, passenger side

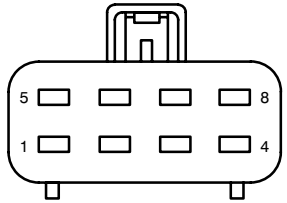

F08209

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	1020 (DG/VT)	Seat heater switch, driver side, to, Heated seat module, driver side front, Enable
3	–	not used
4	57 (BK)	Ground
5	–	not used
6	1256 (WH/YE)	Heated seat switch, passenger side, Heated seat module, passenger side front, to, Enable
7	–	not used
8	235 (RD/BK)	Instrument illumination +

C323 (YE)

14A005

Driver safety belt retractor pretensioner

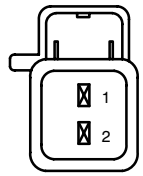

F02042

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Safety belt buckle pretensioner, driver, feed
2	1080 (LG/BK)	Safety belt buckle pretensioner, driver, return