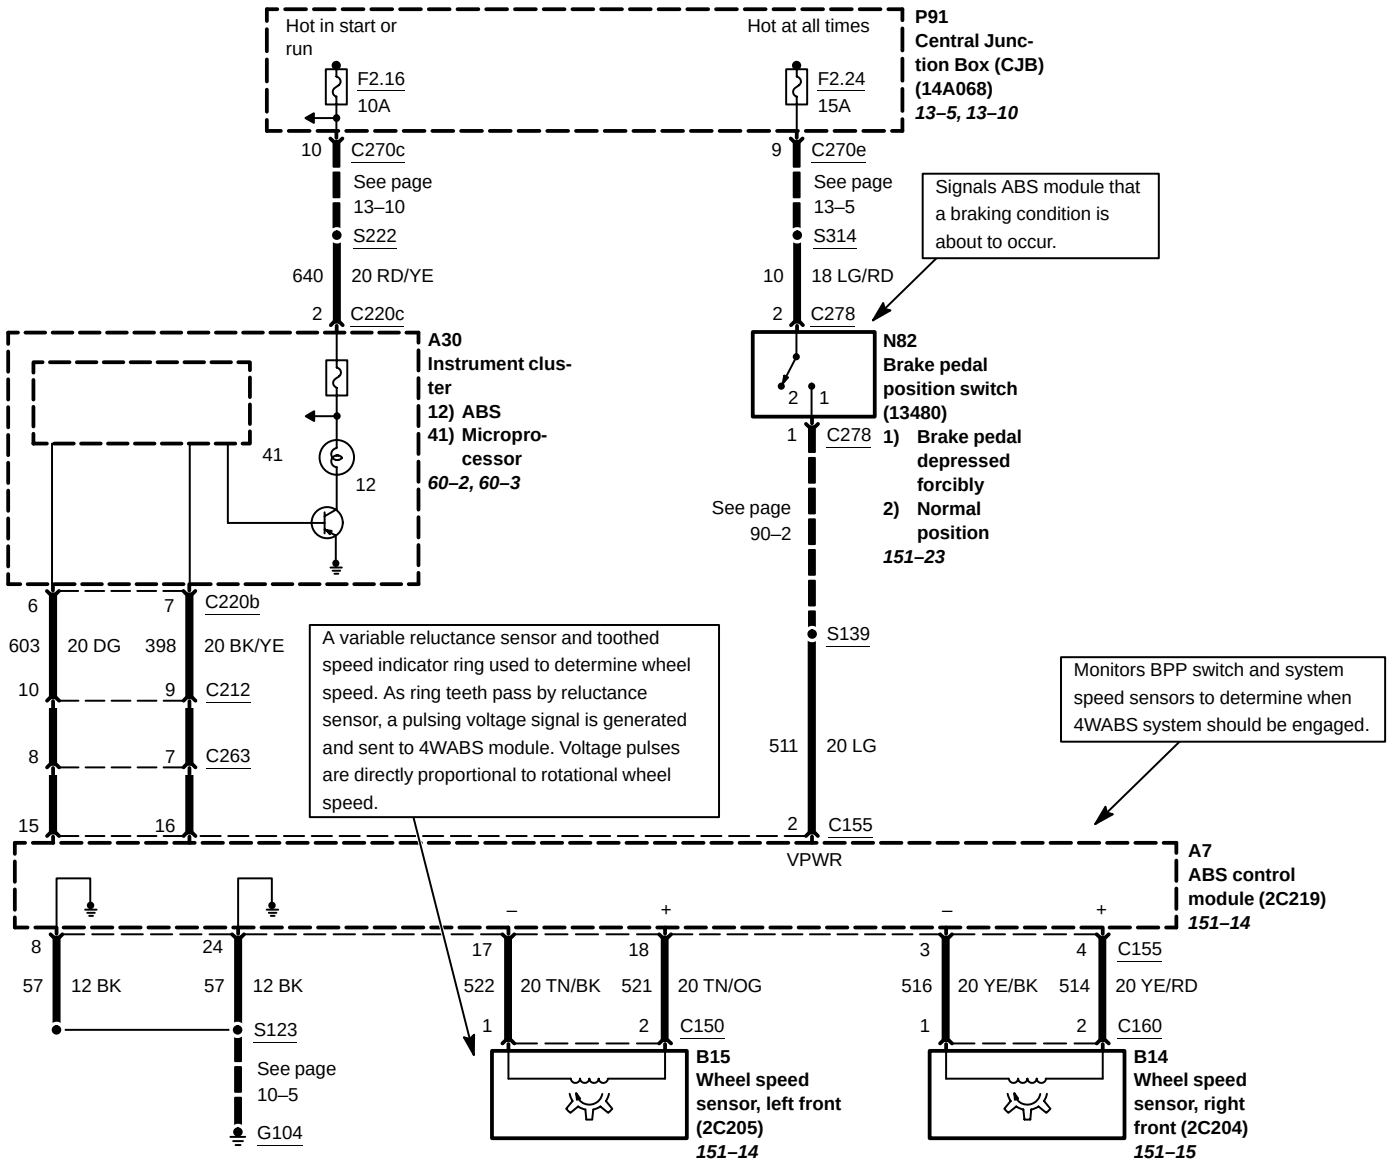
Hot in start or run
Hot at all times
P91
Central Junction Box (CJB)
(14A068)
13–5, 13–10
F2.16
10A
F2.24
15A
10
C270c
See page 13–10
9
C270e
See page 13–5
S222
S314
640
20 RD/YE
10
18 LG/RD
2
C220c
2
C278
Signals ABS module that a braking condition is about to occur.
A30
Instrument cluster
12) ABS
41) Microprocessor
60–2, 60–3
41
12
N82
Brake pedal position switch
(13480)
1) Brake pedal depressed forcibly
2) Normal position
151–23
1
C278
See page 90–2
6
7
C220b
603
20 DG
398
20 BK/YE
10
9
C212
8
7
C263
15
16
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
S139
511
20 LG
2
C155
VPWR
Monitors BPP switch and system speed sensors to determine when 4WABS system should be engaged.
A7
ABS control module (2C219)
151–14
8
57
12 BK
24
57
12 BK
S123
See page 10–5
G104
17
522
20 TN/BK
18
521
20 TN/OG
1
2
C150
B15
Wheel speed sensor, left front
(2C205)
151–14
3
516
20 YE/BK
4
514
20 YE/RD
1
2
C160
B14
Wheel speed sensor, right front
(2C204)
151–15