C452 (BU)

14014

A77
Anti–theft/central locking module

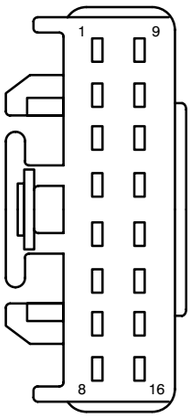

F16029

Pin	Circuit	Circuit Function
1	31S-GL27 (BK/OG)	Ground, switched
2	31S-GL20 (BK/RD)	Ground, switched
3	31S-GL7A (BK/YE)	Ground, switched
4	8-EE9 (WH/GN)	Sensor signal
5	–	not used
6	31S-LG8 (BK/OG)	Ground, switched
7	–	not used
8	29S-GL26 (OG/GN)	Voltage supplied at all times (overload protected), switched
	31S-GL43 (BK/GN)	Ground, switched
9	31S-GL5B (BK/BU)	Ground, switched
10	31S-GL15 (BK/OG)	Ground, switched
11	31S-AA61 (BK/BU)	Ground, switched
12	31S-GL8 (BK/YE)	Ground, switched
13	–	not used
14	–	not used
15	31S-AA62 (BK/WH)	Ground, switched
16	–	not used

C456 (BK)

14401

N278
Ignition switch



F07050

Pin	Circuit	Circuit Function
1	15-DA1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	–	not used
3	31S-TA32 (BK/WH) +	Ground, switched
	31S-TA34 (BK/YE)	Ground, switched
4	30-BB9A (RD)	Voltage supplied at all times (not overload protected)
5	30S-TA31 (RD/BK)	Voltage supplied at all times (not overload protected), switched
6	75-DA1 (YE)	Voltage: Ignition switch in Accessory or Run
7	50-BB16 (GY/BK)	Voltage, ignition switch in Start (not overload protected)