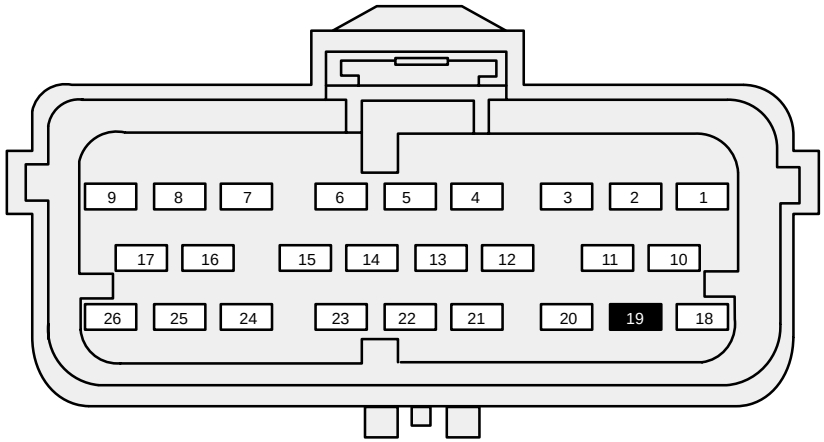

C232

RESTRAINT CONTROL MODULE (RCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1556 (DG/VT)	Occupant Classification Sensor (OCS) Feed	12	1517 (RD/OG)	Driver Air Bag Return (stage 2)
			13	1261 (WH/LG)	Driver Side Sensor Feed
2	1557 (DB/OG)	Occupant Classification Sensor (OCS) Return	14	1262 (BN/LG)	Driver Side Sensor Return
			15	1257 (WH/LB)	Driver Side Air Bag Feed
3	1079 (LG/RD)	Driver Retractor Pretensioner Feed	16	1258 (BN/LB)	Driver Side Air Bag Return
4	1080 (LG/BK)	Driver Retractor Pretensioner Return	17	1263 (WH)	Passenger Side Sensor Feed
5	1311 (OG)	Driver Buckle Status Input	18	1264 (BN)	Passenger Side Sensor Return
6	1081 (YE/RD)	Passenger Retractor Pretensioner Feed	19	–	NOT USED
			20	1518 (RD/WH)	Passenger Air Bag Feed (stage 2)
7	1082 (YE/BK)	Passenger Retractor Pretensioner Return	21	1519 (LG/RD)	Passenger Air Bag Return (stage 2)
			22	629 (BN)	Passenger Air Bag Deactivation Indicator Control
8	1520 (LG)	Driver Seat Track Sensor Feed			
9	1558 (TN/BK)	Driver Seat Track Sensor Return	23	1259 (YE/WH)	Passenger Side Air Bag Feed
10	1085 (LB/RD)	Passenger Buckle Status Input	24	1260 (BN/YE)	Passenger Side Air Bag Return
11	1516 (YE/WH)	Driver Air Bag Feed (stage 2)	25	617 (PK/OG)	Front Crash Sensor Feed
			26	618 (VT/LG)	Front Crash Sensor Return