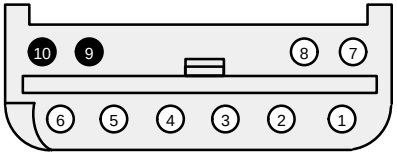

C408

FRONT SUBWOOFER AMPLIFIER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	694 (BK/LG)	Ground
2	694 (BK/LG)	Ground
3	694 (BK/LG)	Ground
4	828 (VT/LB)	Power (Hot at All Times)
5	828 (VT/LB)	Power (Hot at All Times)
6	828 (VT/LB)	Power (Hot at All Times)
7	822 (BK/LG)	Audio Out (+)
8	287 (BK/WH)	Audio Out (–)
9	–	NOT USED
10	–	NOT USED

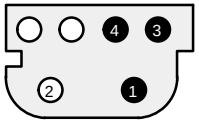

C440 (BLACK)

FRONT SUBWOOFER AMPLIFIER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	173 (DG/VT)	Audio Mute
3	–	NOT USED
4	–	NOT USED
5	168 (RD/BK)	Audio Input (–)
6	167 (BN/OG)	Audio Input (+)

REVISED