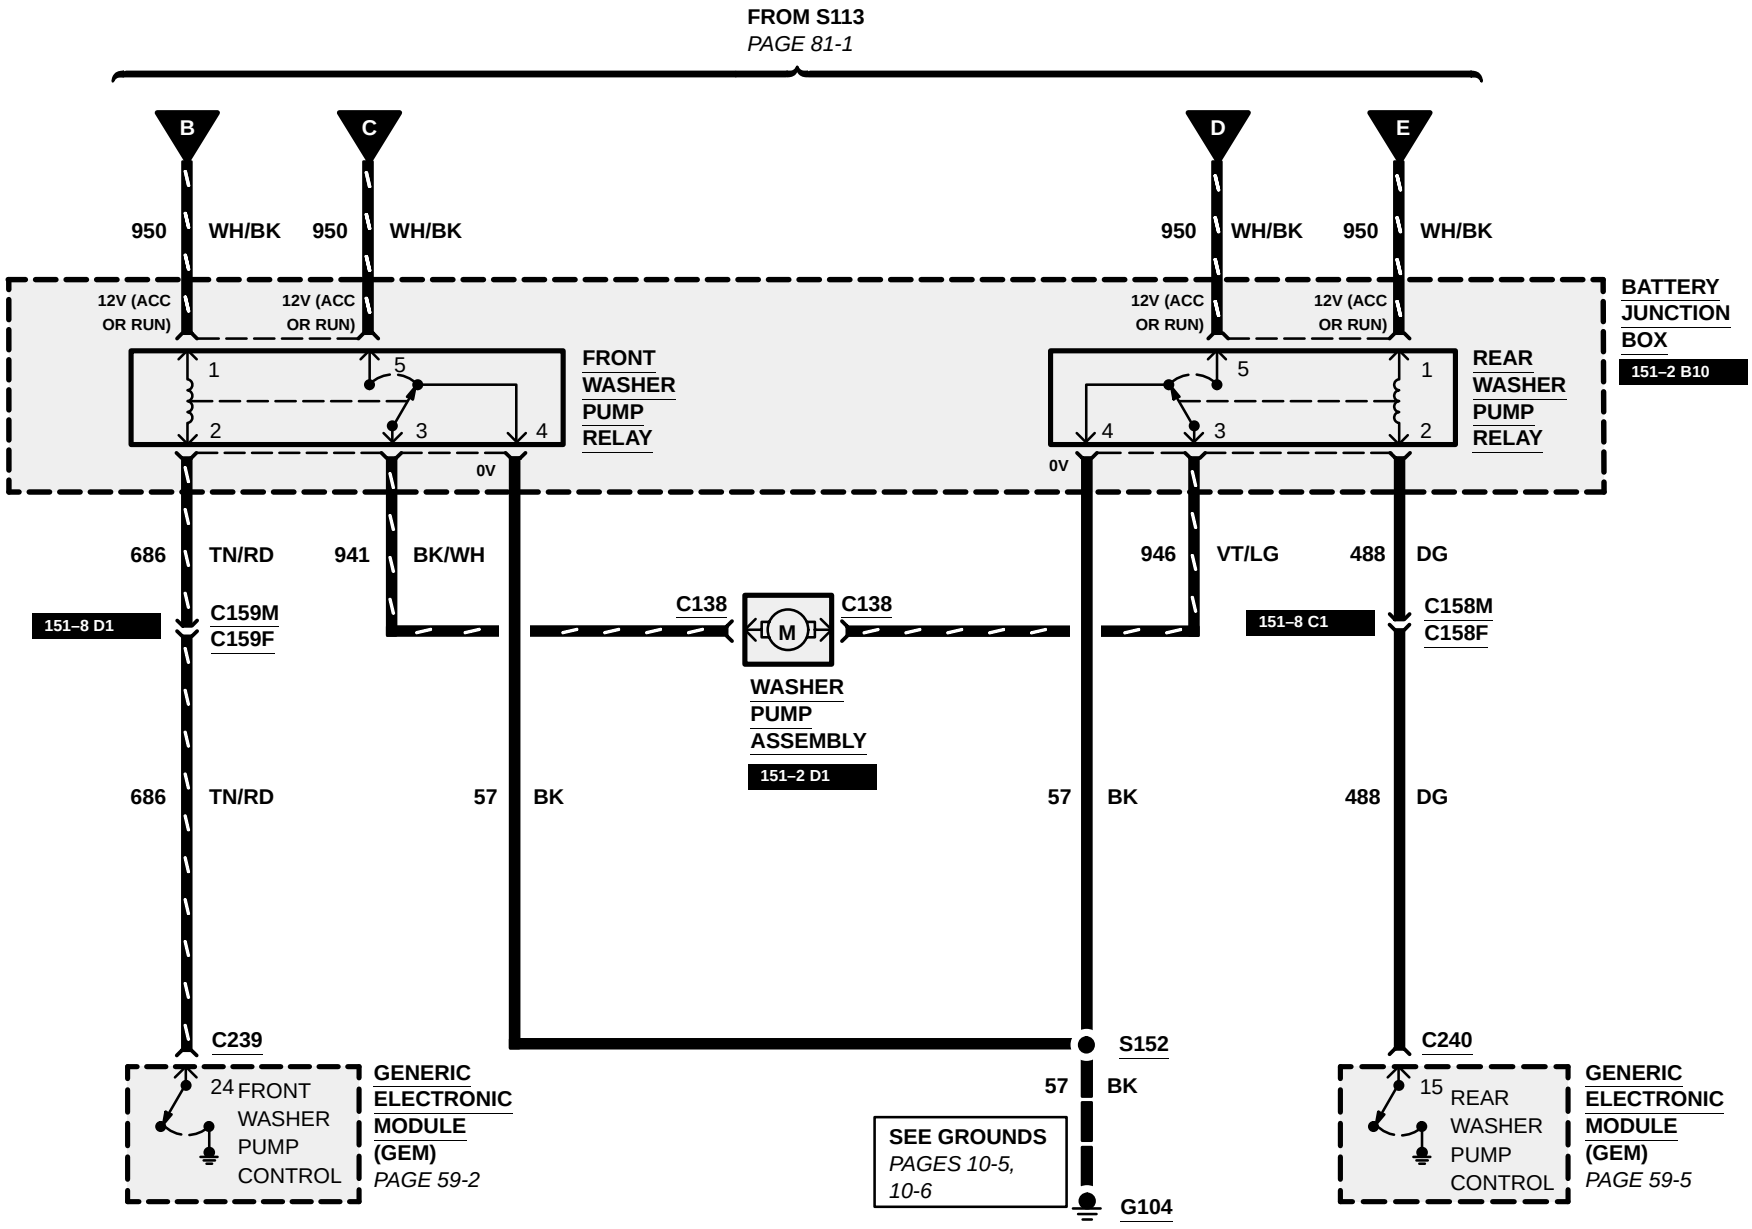
FROM S113
PAGE 81-1
B
C
D
E
950 WH/BK
950 WH/BK
950 WH/BK
950 WH/BK
12V (ACC OR RUN)
12V (ACC OR RUN)
12V (ACC OR RUN)
12V (ACC OR RUN)
BATTERY JUNCTION BOX
151–2 B10
FRONT WASHER PUMP RELAY
REAR WASHER PUMP RELAY
0V
0V
686 TN/RD
941 BK/WH
946 VT/LG
488 DG
151–8 D1
C159M
C159F
C138
C138
M
151–8 C1
C158M
C158F
WASHER PUMP ASSEMBLY
151–2 D1
686 TN/RD
57 BK
57 BK
488 DG
C239
S152
C240
24 FRONT WASHER PUMP CONTROL
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-2
57 BK
SEE GROUNDS
PAGES 10-5, 10-6
G104
15 REAR WASHER PUMP CONTROL
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-5