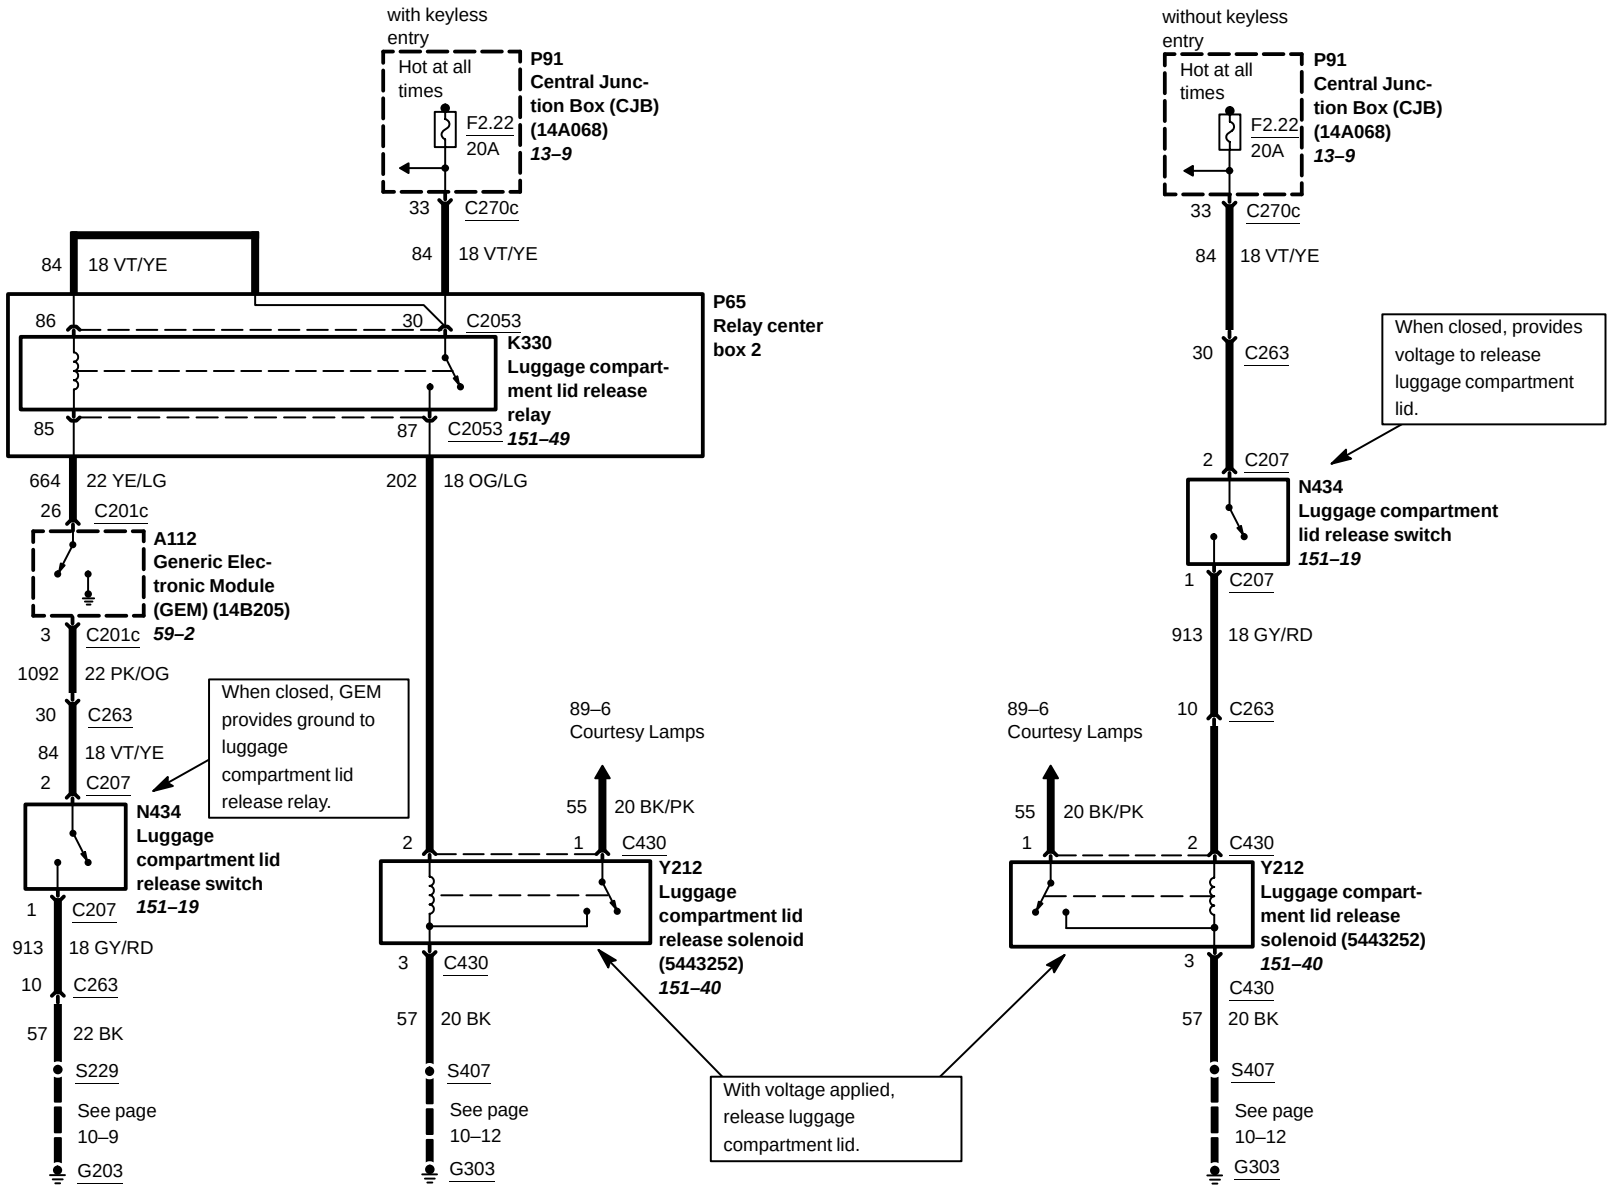
with keyless entry
Hot at all times
P91 Central Junction Box (CJB) (14A068) 13–9
F2.22 20A
33 C270c
84 18 VT/YE
84 18 VT/YE
86
30 C2053
P65 Relay center box 2
K330 Luggage compartment lid release relay 151–49
85
87 C2053
664 22 YE/LG
202 18 OG/LG
26 C201c
A112 Generic Electronic Module (GEM) (14B205) 59–2
3 C201c
1092 22 PK/OG
30 C263
84 18 VT/YE
2 C207
When closed, GEM provides ground to luggage compartment lid release relay.
N434 Luggage compartment lid release switch 151–19
1 C207
913 18 GY/RD
10 C263
57 22 BK
S229
See page 10–9
G203
89–6 Courtesy Lamps
55 20 BK/PK
2
1 C430
Y212 Luggage compartment lid release solenoid (5443252) 151–40
3 C430
57 20 BK
S407
See page 10–12
G303
With voltage applied, release luggage compartment lid.
without keyless entry
Hot at all times
P91 Central Junction Box (CJB) (14A068) 13–9
F2.22 20A
33 C270c
84 18 VT/YE
30 C263
When closed, provides voltage to release luggage compartment lid.
2 C207
N434 Luggage compartment lid release switch 151–19
1 C207
913 18 GY/RD
89–6 Courtesy Lamps
10 C263
55 20 BK/PK
1
2 C430
Y212 Luggage compartment lid release solenoid (5443252) 151–40
3 C430
57 20 BK
S407
See page 10–12
G303