-42

C210

B112
Power steering
pressure sensor

Pin	Circuit	Circuit Function
1	9-CE10 (BN/WH)	Sensor signal return (reference/ground)
2	7-CE10 (YE/VT)	Constant DC voltage, other than battery
3	8-CE10 (WH/VT)	Sensor signal (X–direction, forward, upward)

C303

14K733

E43
Fog lamp, left front

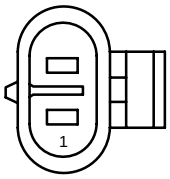

F02038

Pin	Circuit	Circuit Function
1	15S-LD11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	31-LD11 (BK)	Ground

C305 (BK)

14K733

E42
Fog lamp, right front

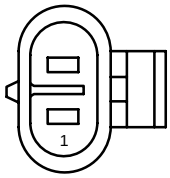

F02038

Pin	Circuit	Circuit Function
1	15S-LD17 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	31-LD17 (BK)	Ground