C6013m

CAT Engine Harness

ECM connector

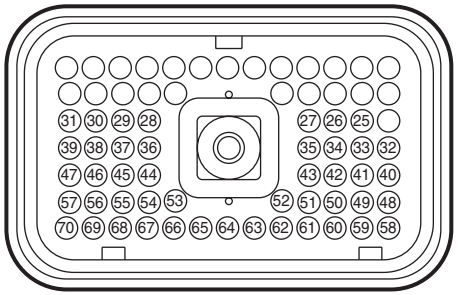

3526965C1

Pin	Circuit	Circuit Function
25	—	Not used
26	—	Not used
27	—	Not used
28	658 (PK/LG)	Module, powertrain control to check engine lamp
29	617 (PK/OG)	Warning lamp
30	80 (BK/OG)	Engine compartment lamp feed
31	464 (BK/PK)	Module to lamp
32	679 (GY/BK)	Vehicle speed signal - plus to module, powertrain control
33	—	Not used
34	1828 (GN)	CAN - data link
35	154 (VT/LG)	Speed control set
36	—	Not used
37	—	Not used
38	648 (WH/PK)	Tachometer to RPM sensor, feed
39	—	Not used
40	312 (OG/WH)	Customer access input
41	—	Not used
42	—	Not used
43	—	Not used
44	848 (DG/OG)	Speed control switch to amplifier
45	569 (DG)	Service brake position
46	—	Not used
47	—	Not used

Pin	Circuit	Circuit Function
48	785 (BK/LG)	Battery tomodule
49	—	Not used
50	1827 (YE)	CAN + data link
51	—	Not used
52	785 (BK/LG)	Battery to module
53	785 (BK/LG)	Battery to module
54	—	Not used
55	785 (BK/LG)	Battery to module
56	900 (BK)	PTO on/off switch
57	—	Not used
58	921 (GY/OG)	PTO set switch
59	151 (LB/BK)	Speed control on/off switch to amplifier
60	922 (WH/RD)	Customer access input
61	—	Not used
62	—	Not used
63	570 (BK/WH)	Ground (type 1 ground)
64	—	Not used
65	570 (BK/WH)	Ground (type 1 ground)
66	359 (GY/RD)	Sensor, signal return
67	570 (BK/WH)	Ground (type 1 ground)
68	1283 (TN/YE)	PCM - accelerator pedal sensor
69	570 (BK/WH)	Ground (type 1 ground)
70	16 (RD/LG)	Ignition switch to ignition coil 'batt' terminal