C341c (GY)

14A699

Driver seat module
(14C718)

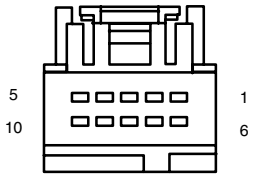

F10135

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	1906 (VT)	UBP Bus
3	268 (BK/OG)	Memory seat switch, position 2
4	267 (BN/LG)	Memory seat switch, position 1
5	270 (BN/OG)	Memory set switch (14776)
6	875 (BK/LB)	Ground
7	1491 (LB/YE)	Adjustable pedal motor (2C429), position, signal
8	1493 (PK/BK)	Adjustable pedal motor (2C429), Forward, signal
9	1492 (LB/RD)	Adjustable pedal motor (2C429), Rearward, signal
10	272 (WH/OG)	Memory set switch (14776), indicator, control

C341d (GY)

14A699

Driver seat module
(14C718)

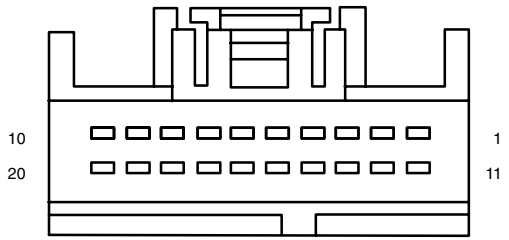

F20057

Pin	Circuit	Circuit function
1	1482 (PK)	Right mirror, Up, feed
2	1483 (WH/PK)	Right mirror, Down, feed
3	1486 (YE/LB)	Left mirror, Up, feed
4	1487 (DB)	Left mirror, Down, feed
5	1475 (PK/OG)	Right mirror, Up/Down mirror movement, signal
6	1477 (YE/BK)	Power mirror switch, signal, common
7	1478 (DG/OG)	Right mirror, Right/Left mirror movement, signal
8	949 (RD/WH)	Left mirror, Right/Left mirror movement, position, signal
9	951 (DB/WH)	Left mirror, Up/Down mirror movement, position, signal
10	955 (GY)	Sensor, return to Driver seat module (14C718)
11	1481 (DG)	Right mirror, Right, feed
12	1480 (WH/LG)	Right mirror, Left, feed
13	1484 (YE/RD)	Left mirror, Left, feed
14	1485 (RD)	Left mirror, Right, feed
15	1479 (DB/OG)	Left mirror, Up/Down mirror movement, signal
16	1476 (RD/OG)	Left mirror, Right/Left mirror movement, signal
17	–	not used
18	954 (DG/WH)	Right mirror, Right/Left mirror movement, position, signal
19	957 (VT/WH)	Right mirror, Up/Down mirror movement, position, signal
20	958 (GY/RD)	Sensor, feed, from, Driver seat module (14C718)