## C189

### 12B637

B8
Throttle Position
Sensor (TPS)
(9B989)

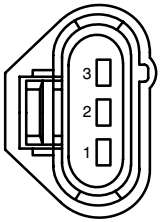

F03145

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 9-RJ28 (BN) | Sensor signal return (reference/ground) |
| 2 | 8-RJ28 (WH) | Sensor signal |
| 3 | 7-RJ28 (YE) | Voltage DC supplied at all times (sensor) |

## C191

### 12B637

A149
Inlet Manifold Runner
Control (IMRC) module

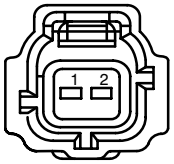

F02101

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 15S-RL20 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), Switched |
| 2 | 91S-RL20 (BN/YE) | Ground, Switched |

## C192

### 9D930

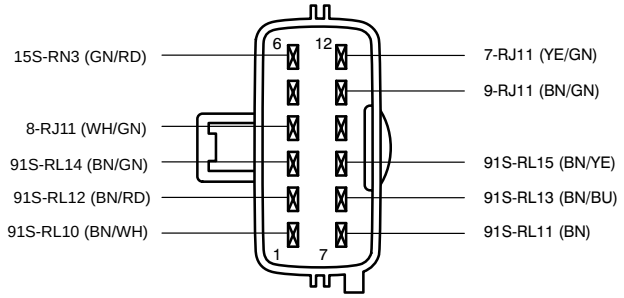

F12073

### 12B637

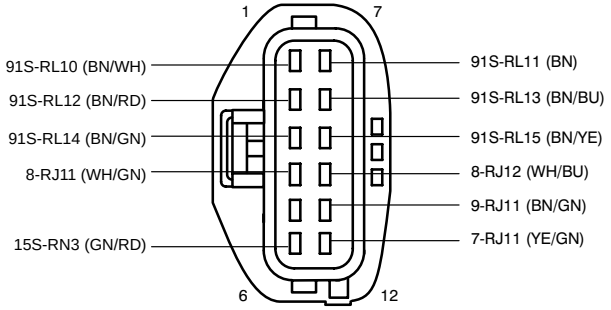

F12081

## C193

### 7E443

B110
Output Shaft Speed
(OSS) sensor
(7M101)

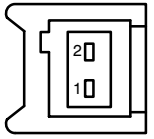

F02115

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 8-TA57 (WH/RD) | Sensor signal |
| 2 | 9-TA57 (BN/RD) | Sensor signal return (reference/ground) |