C527 (WH)

14A005

Exterior rear view mirror switch (17B676)

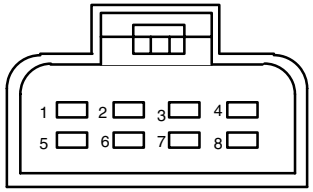

F08177

Pin	Circuit	Circuit function
1	956 (OG/LG)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Right/Left mirror movement – passenger side
4	540 (RD)	Right/Left mirror movement – driver side
5	57 (BK)	Ground
6	542 (YE)	Mirror motor, feed
7	541 (DB)	Up/Down mirror movement – driver side
8	544 (VT)	Up/Down mirror movement – passenger side

C535 (BK)

14A005

Master window adjust switch (14529)

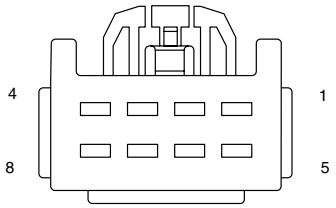

F08167

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	313 (WH/YE)	Window switch, feed, right front – Down
3	314 (TN/LB)	Window switch, feed, right front – Up
4	400 (LB/BK)	Accessory relay, switched power, output
5	–	not used
6	995 (GY)	Window motor, feed – one–touch down, signal
7	992 (WH/BK)	Master window adjust switch (14529), feed – Up
8	991 (TN/LB)	Master window adjust switch (14529), feed – Down

C602 (BK)

14630/14A005

Door ajar switch, right front

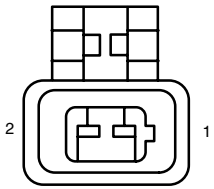

F02117

Pin	Circuit	Circuit function
1	345 (BK/PK)	Door ajar switch, right front, signal, input
2	57 (BK)	Ground