C103

12A581

N17
Oil pressure switch
(9278)

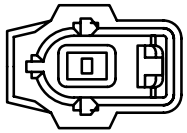

F01016

Pin	Circuit	Circuit Function
1	31 (WH/RD)	Engine oil pressure indicator, control

C106

12A581

B225
Fuel rail pressure
transducer sensor

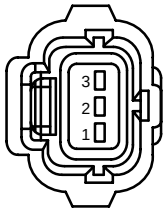

F03215

Pin	Circuit	Circuit Function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	141 (RD/PK)	Fuel rail pressure transducer sensor

C108

12A581

B45
Knock sensor
(12A699)

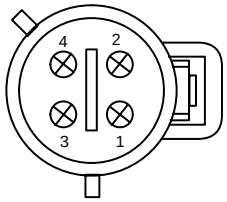

F04263

Pin	Circuit	Circuit Function
1	310 (YE/RD)	Knock sensor (12A699) 1 +
2	311 (DG/VT)	Knock sensor (12A699) 1 –
3	1273 (YE)	Knock sensor (12A699) 2 +
4	1274 (DG/WH)	Knock sensor (12A699) 2 –