C221

14334

A164
Microphone

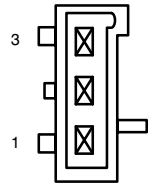

F03144

Pin	Circuit	Circuit function
1	714 (VT)	Microphone, audio
2	48	Shield
3	715 (LG)	Microphone, Ground

C239

14A348 / 14A005

A284
Trailer electronic brake control module

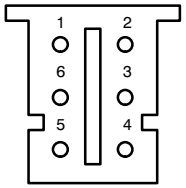

F06089

Pin	Circuit	Circuit function
1	50 (RD)	Central Junction Box (CJB) (14A068), Start, to, Ignition switch (11572)
2	511 (LG)	Brake pedal position switch (13480), to stoplamps
3	43 (DB)	Electric trailer brakes
4	–	not used
5	14 (BN)	Power, Exterior lamps
6	206 (WH)	Trailer tow connector (15A416), Ground

C250

14401

N278
Ignition switch (11572)

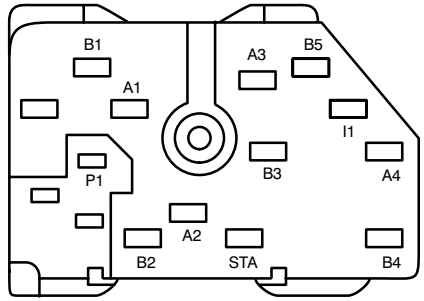

F15009

Pin	Circuit	Circuit function
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
A2	–	not used
A3	37 (YE)	Voltage supplied at all times (overload protected)
A4	298 (VT/OG)	Voltage in Run (overload protected)
B1	1118 (RD)	Battery voltage, hot at all times (not fused and primary fused)
B2	–	not used
B3	1118 (RD)	Battery voltage, hot at all times (not fused and primary fused)
B4	1050 (LG/VT)	Voltage supplied at all times (overload protected)
B5	1050 (LG/VT)	Voltage supplied at all times (overload protected)
I1	1044 (WH/YE)	Voltage supplied in Start and Run (overload protected)
P1	–	not used
P2	–	not used
STA	1522 (DG)	Voltage: Ignition switch in Start