C500a

14K024

A11
Radio

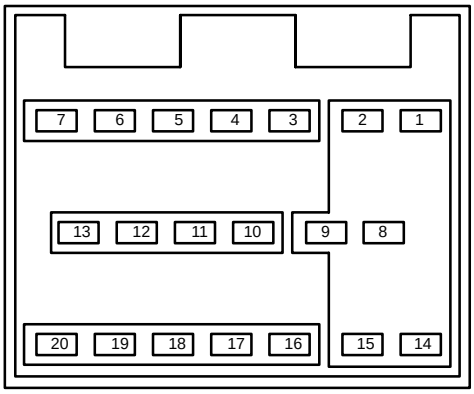

F20022

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	8-MD24 (WH/GN)	Sensor signal
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	–	not used
19	–	not used
20	–	not used

C500b

14K024

A11
Radio

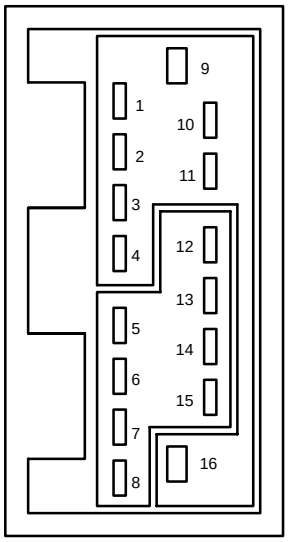

F16054

Pin	Circuit	Circuit Function
1	64S-LK34 (BU/BK)	Variable D.C. voltage (not overload protected), switched
2	91-MD15B (BK/GN)	Ground
3	–	not used
4	91-MD15C (BK/GN)	Ground
5	8-MD18 (WH)	Sensor signal
6	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)
7	8-MD17 (WH/RD)	Sensor signal
8	10-MD17 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
9	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
10	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
11	91-MD15A (BK/GN)	Ground
12	8-MD11 (WH/VT)	Sensor signal
13	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
14	8-MD10 (WH/BK)	Sensor signal
15	10-MD10 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
16	91-MD15 (BK/GN)	Ground