C289

19D887

M207
Fresh/recirculation door actuator (19E616)

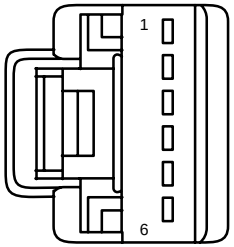

F06179

Pin	Circuit	Circuit function
1	33-FB8 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB8 (WH/RD)	Sensor signal
4	7-FB8 (YE/RD)	Voltage DC supplied at all times (sensor)
5	9-FB8 (BN/RD)	Sensor signal return (reference/ground)
6	32-FB8 (WH/RD)	Switched between: Battery voltage, Ground or Open

C295

19D887

M224
Cool air bypass actuator (19E616)

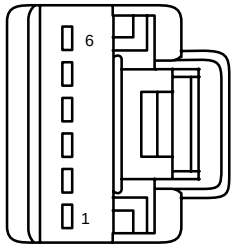

F06179

Pin	Circuit	Circuit function
1	32-FB2 (WH/RD)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB2 (WH/RD)	Sensor signal
4	9-FB2 (BN/RD)	Sensor signal return (reference/ground)
5	7-FB2 (YE/RD)	Voltage DC supplied at all times (sensor)
6	33-FB2 (YE/RD)	Switched between: Battery voltage, Ground or Open

C296

19D887

B217
Evaporator discharge air temperature sensor (19C734)

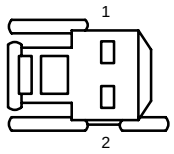

F02047

Pin	Circuit	Circuit function
1	9-FA44 (BN/RD)	Sensor signal return (reference/ground)
2	8-FA44 (WH/RD)	Sensor signal