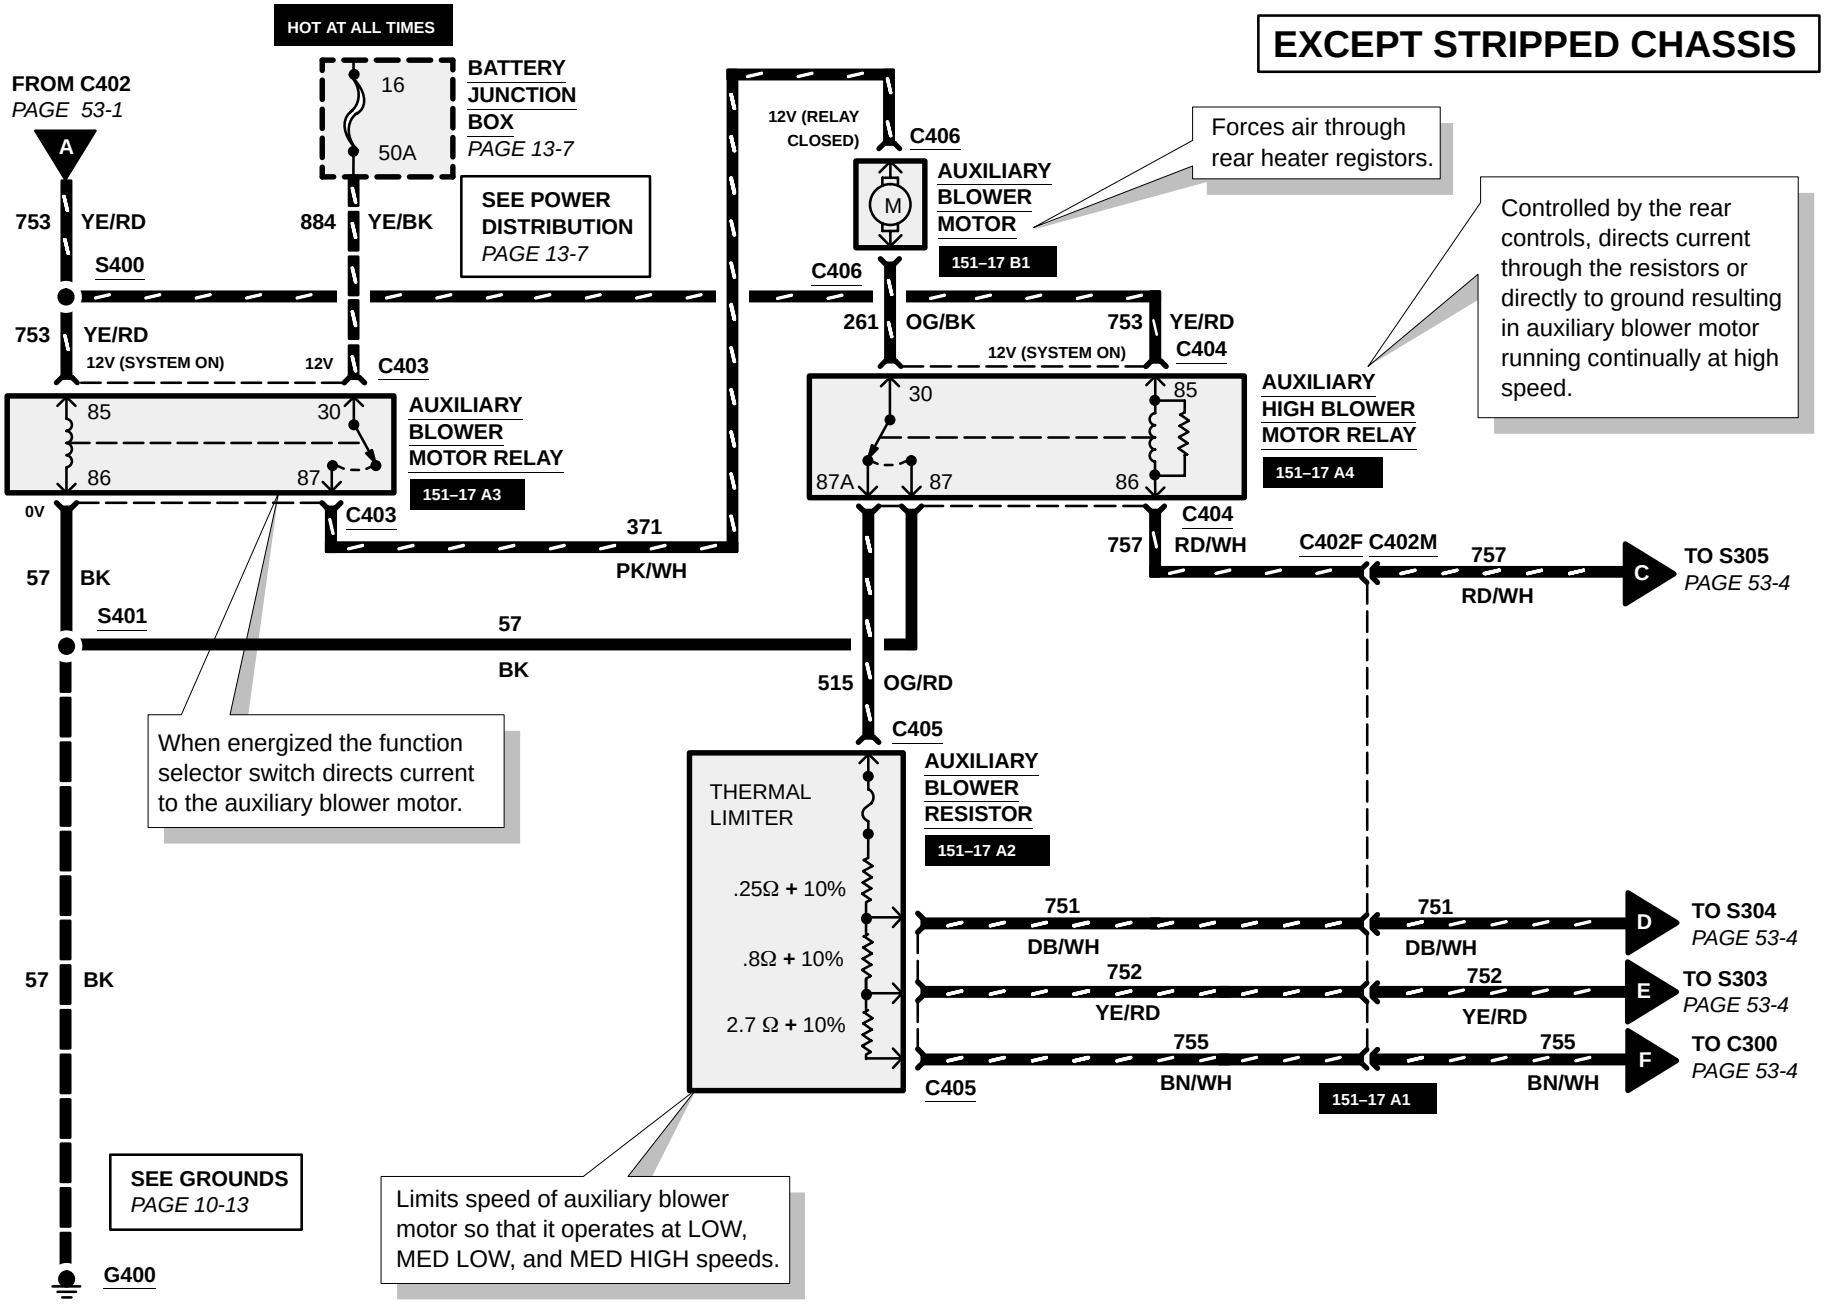
EXCEPT STRIPPED CHASSIS
HOT AT ALL TIMES
FROM C402
PAGE 53-1
A
BATTERY JUNCTION BOX
PAGE 13-7
16
50A
753 YE/RD
884 YE/BK
SEE POWER DISTRIBUTION
PAGE 13-7
S400
753 YE/RD
12V (SYSTEM ON)
12V
C403
85
30
86
87
AUXILIARY BLOWER MOTOR RELAY
151–17 A3
0V
C403
371
PK/WH
57 BK
S401
57
BK
When energized the function selector switch directs current to the auxiliary blower motor.
12V (RELAY CLOSED)
C406
M
AUXILIARY BLOWER MOTOR
151–17 B1
Forces air through rear heater registors.
C406
261 OG/BK
753 YE/RD
C404
12V (SYSTEM ON)
30
85
87A
87
86
AUXILIARY HIGH BLOWER MOTOR RELAY
151–17 A4
Controlled by the rear controls, directs current through the resistors or directly to ground resulting in auxiliary blower motor running continually at high speed.
C404
757 RD/WH
C402F C402M
757
RD/WH
C
TO S305
PAGE 53-4
515 OG/RD
C405
AUXILIARY BLOWER RESISTOR
151–17 A2
THERMAL LIMITER
.25Ω + 10%
.8Ω + 10%
2.7 Ω + 10%
751
DB/WH
751
DB/WH
D
TO S304
PAGE 53-4
752
YE/RD
752
YE/RD
E
TO S303
PAGE 53-4
755
BN/WH
755
BN/WH
F
TO C300
PAGE 53-4
C405
151–17 A1
57 BK
SEE GROUNDS
PAGE 10-13
G400
Limits speed of auxiliary blower motor so that it operates at LOW, MED LOW, and MED HIGH speeds.