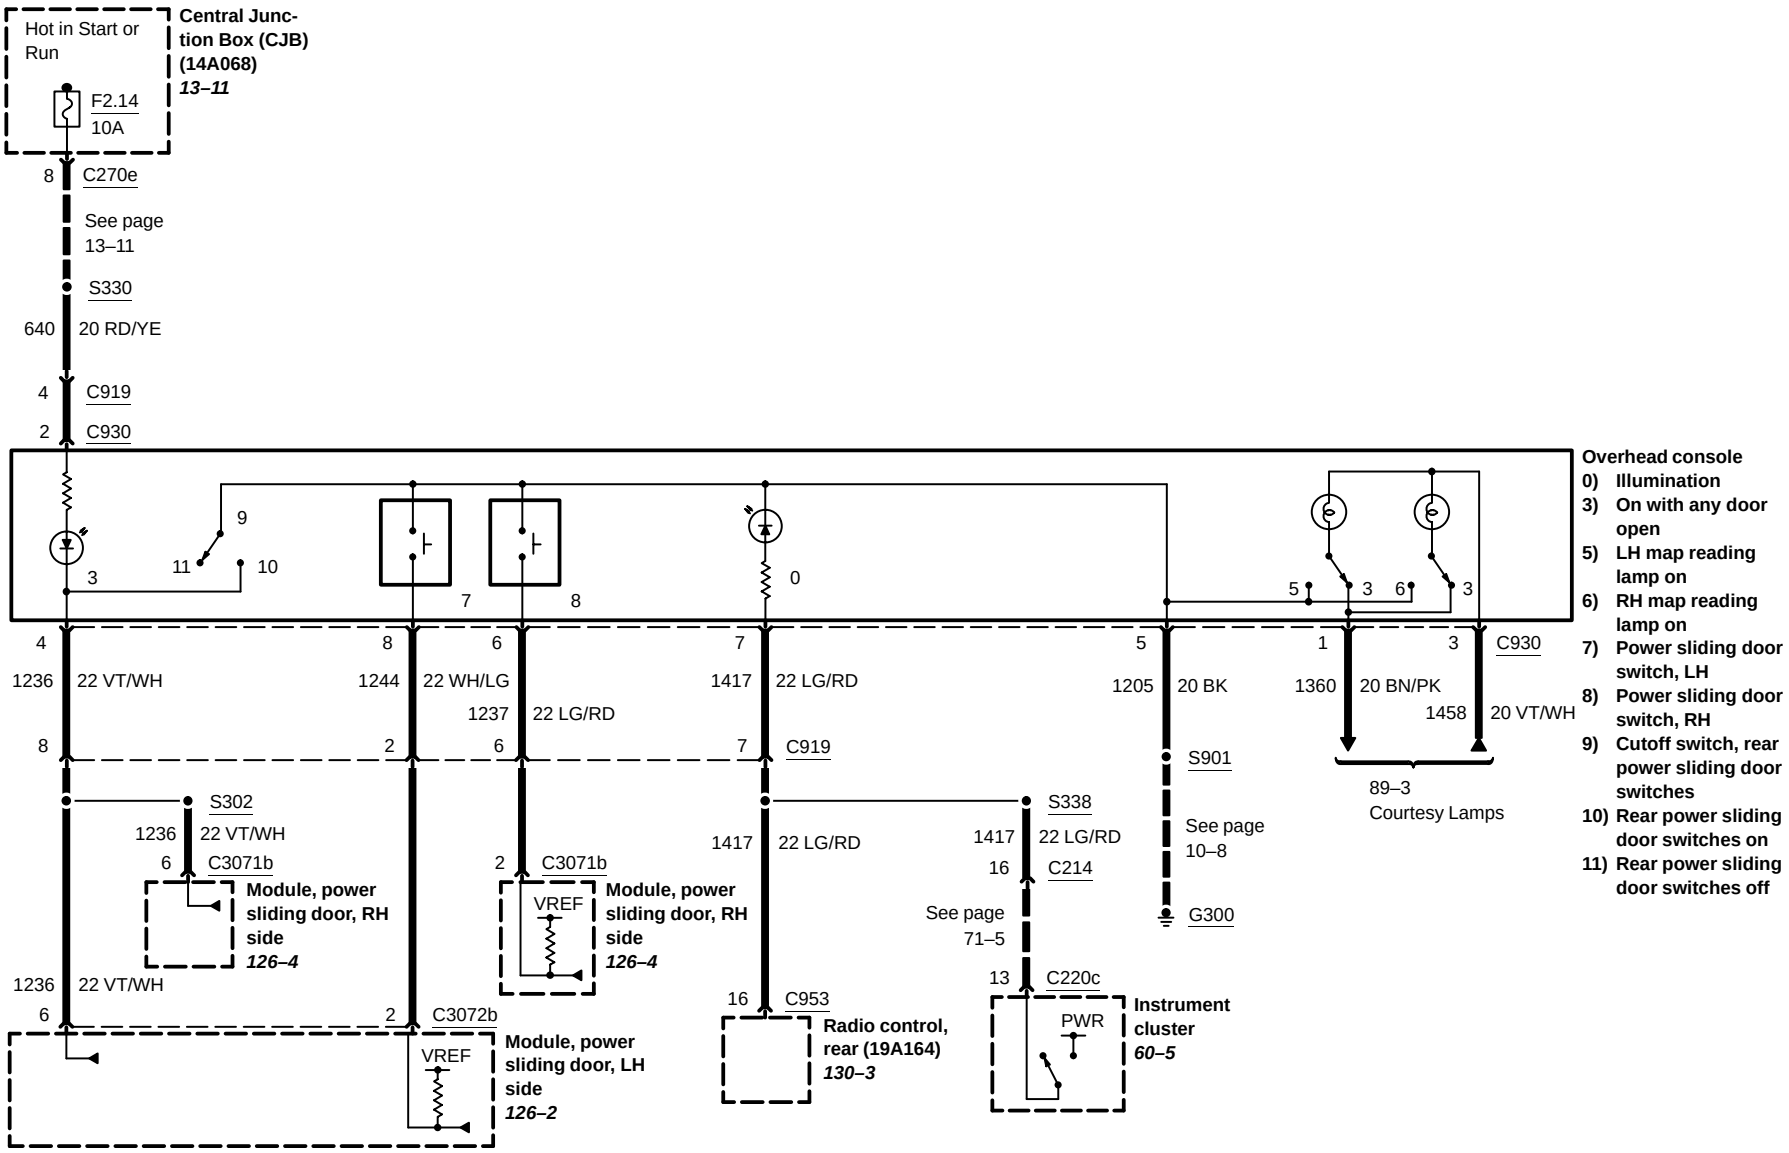
Hot in Start or Run
F2.14
10A
Central Junction Box (CJB) (14A068)
13–11
8
C270e
See page 13–11
S330
640
20 RD/YE
4
C919
2
C930
3
9
11
10
7
8
0
5
3
6
3
Overhead console
0) Illumination
3) On with any door open
5) LH map reading lamp on
6) RH map reading lamp on
7) Power sliding door switch, LH
8) Power sliding door switch, RH
9) Cutoff switch, rear power sliding door switches
10) Rear power sliding door switches on
11) Rear power sliding door switches off
4
1236
22 VT/WH
8
8
1244
22 WH/LG
6
1237
22 LG/RD
2
6
7
1417
22 LG/RD
7
C919
5
1205
20 BK
S901
See page 10–8
G300
1
3
C930
1360
20 BN/PK
1458
20 VT/WH
89–3
Courtesy Lamps
S302
1236
22 VT/WH
6
C3071b
Module, power sliding door, RH side
126–4
2
C3071b
VREF
Module, power sliding door, RH side
126–4
1417
22 LG/RD
S338
1417
22 LG/RD
16
C214
See page 71–5
13
C220c
PWR
Instrument cluster
60–5
1236
22 VT/WH
6
2
C3072b
VREF
Module, power sliding door, LH side
126–2
16
C953
Radio control, rear (19A164)
130–3