C9102

Main Chassis Harness

Fuel transfer pump

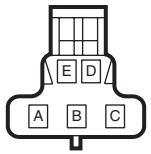

3522252C1

Pin	Circuit	Circuit Function
A	29 (YE/WH)	Fuel gage to fuel gage sender
B	1357 (LB/YE)	Fuel level sender left tank
C	1818 (WH/BK)	Alternator sense
D	396 (BK/OG)	Logic ground
E	787 (PK/BK)	Fuel pump power

C9303

Rear Chassis Harness

Stop tail and turn



1661375C2

Pin	Circuit	Circuit Function
A	140 (BK/PK)	Back up lamp
B	9 (LG/OG)	LH rear turn signal lamp
C	5 (DG/B)	RH rear turn signal lamp
D	14 (BN)	Headlamp switch to tail lamps and side marker lamps
E	57 (BK)	Ground circuit

C9501

Rear Chassis Harness

Wheel speed sensor, left

1684261C1

Pin	Circuit	Circuit Function
1	519 (LG/BK)	LH rear sensor, (low) to module
2	518 (LG/RD)	Rear sensor, (high) to module

C9502

Rear Chassis Harness

Modulator, left

1686834C1

Pin	Circuit	Circuit Function
A	609 (OG/YE)	Modulator left rear to ABS ECU
B	619 (PK/WH)	Modulator left rear to ABS ECU
C	620 (VT/LB)	Modulator left rear to ABS ECU

C9503

Rear Chassis Harness

Wheel speed sensor, right

1684261C1

Pin	Circuit	Circuit Function
1	524 (PK/BK)	RH rear sensor, (low) to module
2	523 (RD/PK)	RH rear sensor, (high) to module