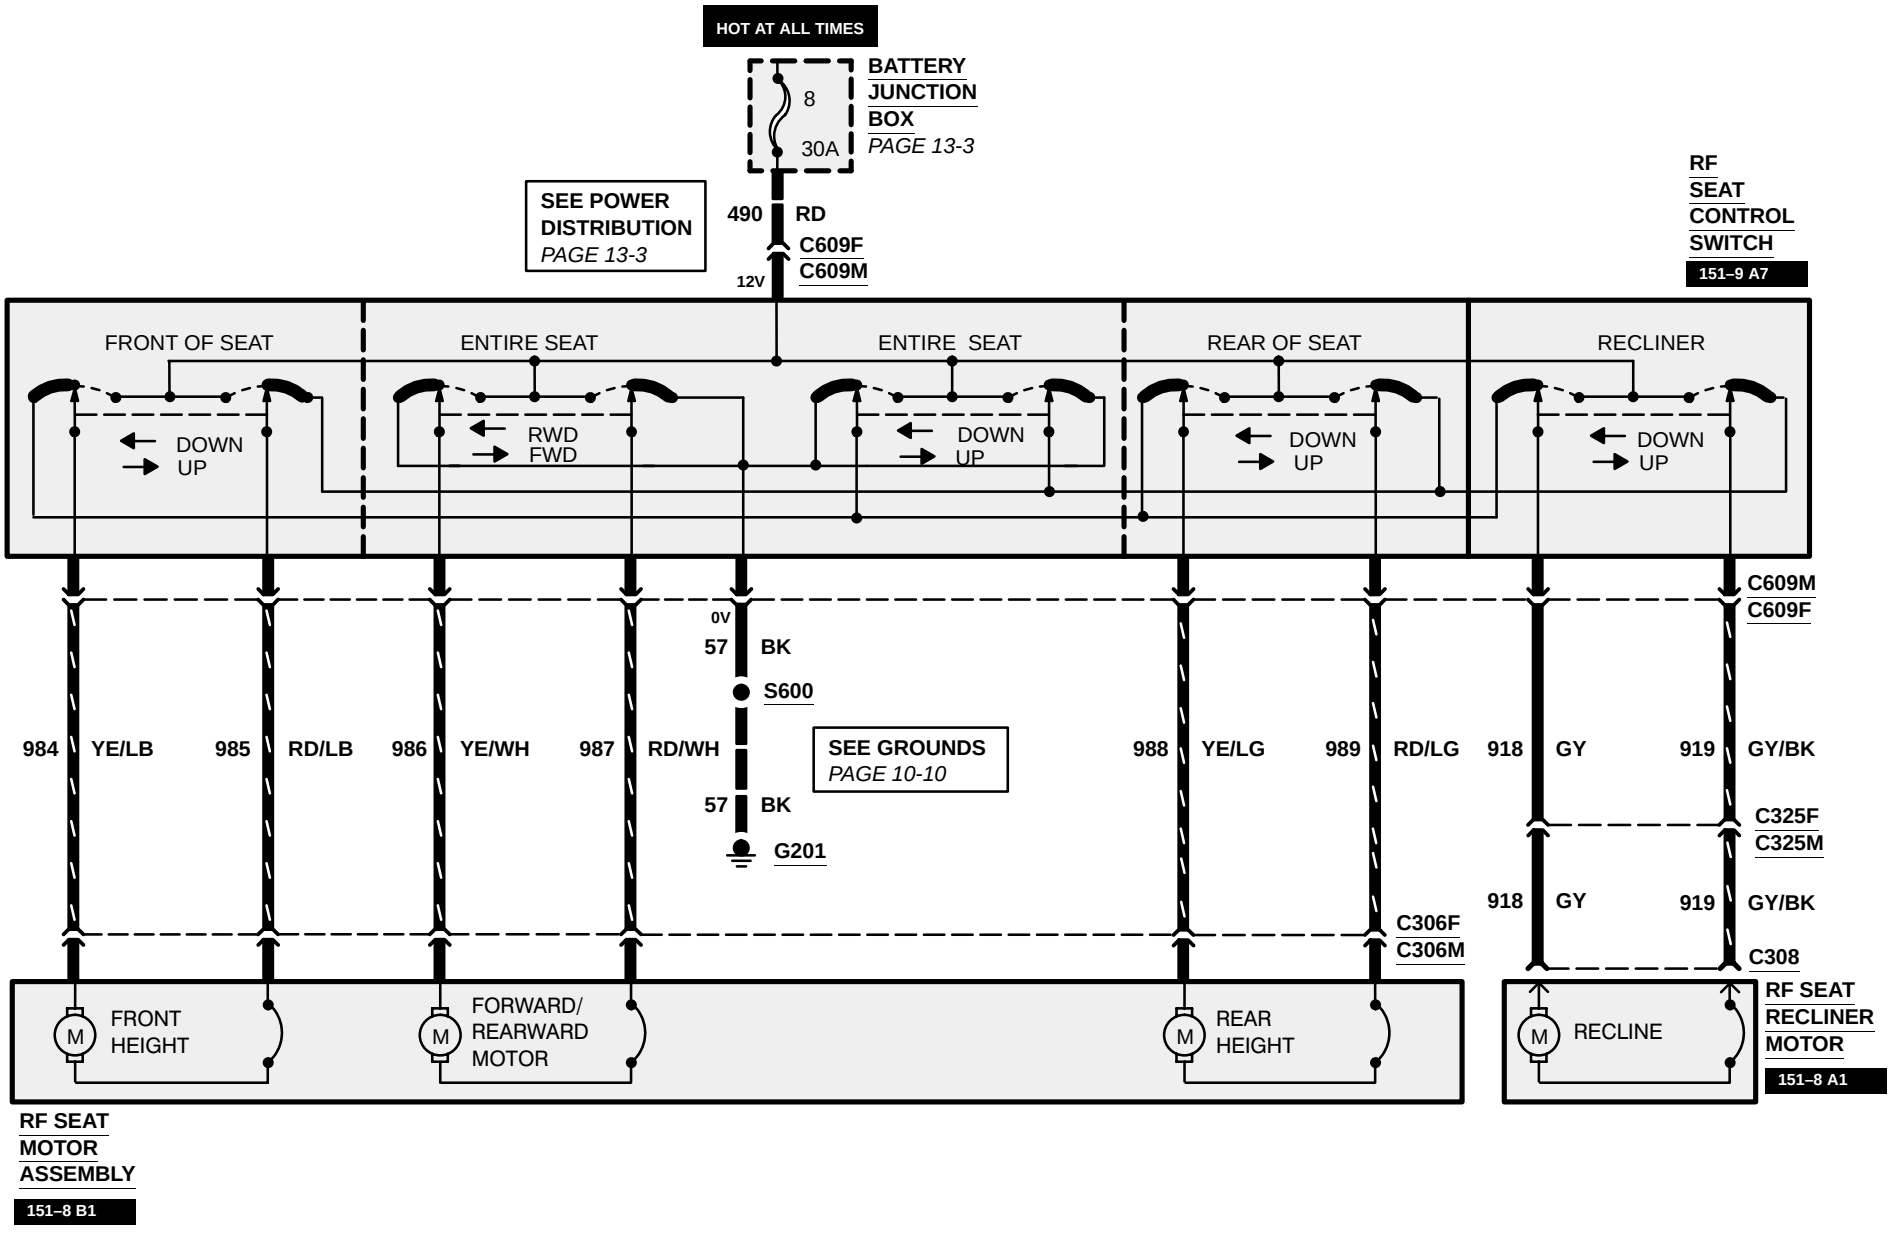
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
8
30A
SEE POWER DISTRIBUTION
PAGE 13-3
490 RD
C609F
C609M
12V
RF SEAT CONTROL SWITCH
151–9 A7
FRONT OF SEAT
ENTIRE SEAT
ENTIRE SEAT
REAR OF SEAT
RECLINER
DOWN
UP
RWD
FWD
DOWN
UP
DOWN
UP
DOWN
UP
C609M
C609F
0V
57 BK
S600
SEE GROUNDS
PAGE 10-10
57 BK
G201
984 YE/LB
985 RD/LB
986 YE/WH
987 RD/WH
988 YE/LG
989 RD/LG
918 GY
919 GY/BK
C325F
C325M
918 GY
919 GY/BK
C306F
C306M
C308
M
FRONT HEIGHT
M
FORWARD/ REARWARD MOTOR
M
REAR HEIGHT
M
RECLINE
RF SEAT RECLINER MOTOR
151–8 A1
RF SEAT MOTOR ASSEMBLY
151–8 B1