C220c

14401

Instrument cluster
Instrument cluster

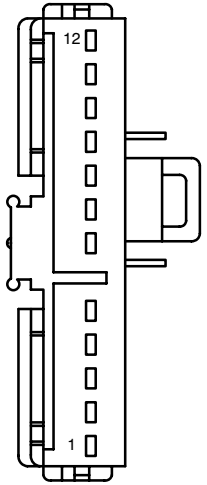

F12020

* Stripped chassis

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	14 (BN)	Power, Exterior lamps
3	85 (BN/LB)	Safety belt buckle switch (10B924), input
4	977 (VT/WH)	Brake indicator, control
4	*128 (VT/YE)	Brake indicator, control
5	904 (LG/RD)	Generator/Battery indicator, control
6	608 (BK/YE)	Air bag indicator, control
7	1044 (WH/YE)	Voltage supplied in Start and Run (overload protected)
8	683 (PK/LB)	vehicle speed control signal
9	–	not used
10	*345 (BK/PK)	Door ajar switch, right front, signal
11	–	not used
12	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)