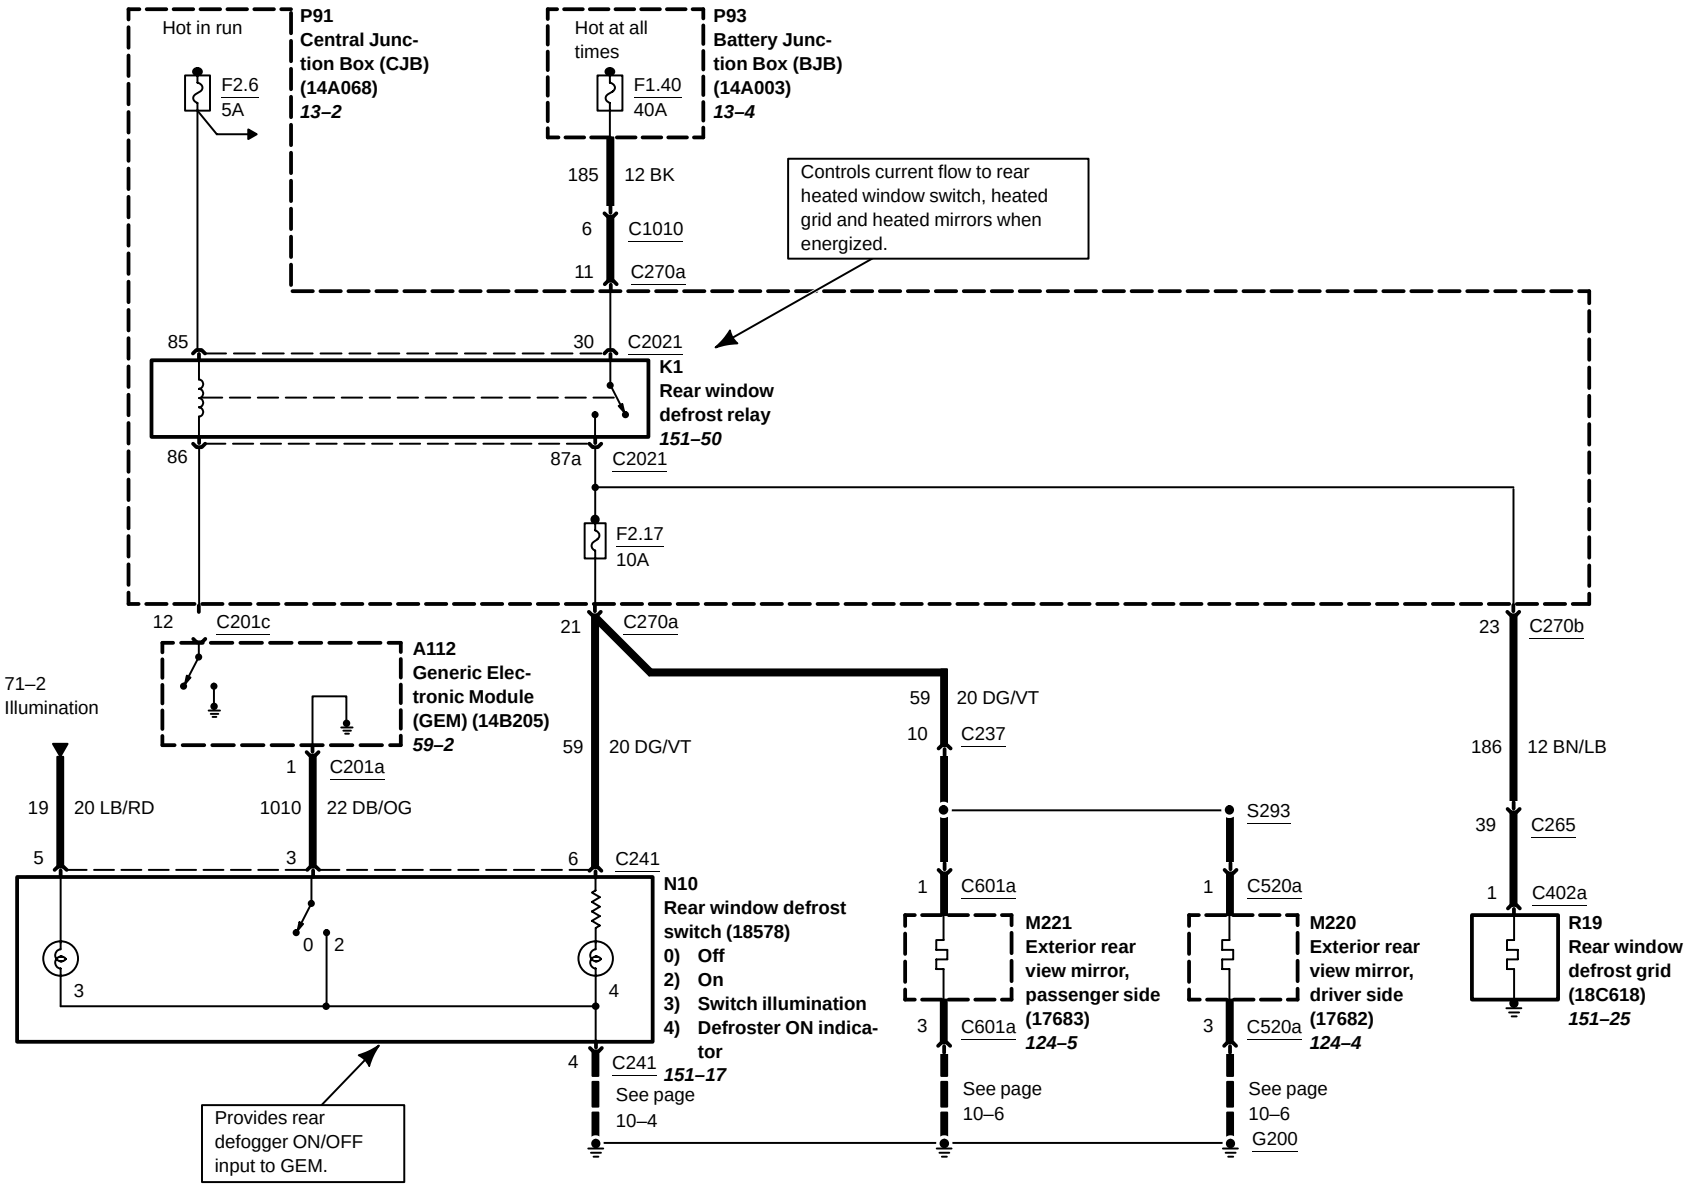
Hot in run
P91
Central Junction Box (CJB)
(14A068)
13–2
F2.6
5A
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–4
F1.40
40A
185
12 BK
6
C1010
11
C270a
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
85
30
C2021
K1
Rear window defrost relay
151–50
86
87a
C2021
F2.17
10A
12
C201c
21
C270a
23
C270b
A112
Generic Electronic Module (GEM) (14B205)
59–2
71–2
Illumination
59
20 DG/VT
59
20 DG/VT
10
C237
186
12 BN/LB
1
C201a
19
20 LB/RD
1010
22 DB/OG
5
3
6
C241
S293
39
C265
1
C601a
1
C520a
1
C402a
N10
Rear window defrost switch (18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator
151–17
0
2
3
4
M221
Exterior rear view mirror, passenger side (17683)
124–5
M220
Exterior rear view mirror, driver side (17682)
124–4
R19
Rear window defrost grid (18C618)
151–25
3
C601a
3
C520a
4
C241
See page 10–4
See page 10–6
See page 10–6
G200
Provides rear defogger ON/OFF input to GEM.