C23

A38
Central timer module

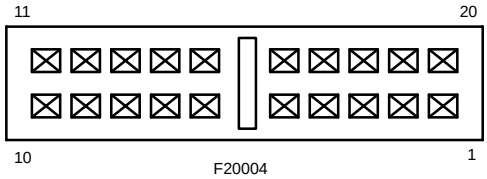

F20004

C50

14K733

K4
Fuel pump relay

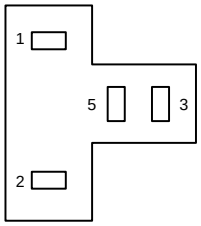

F04018

Pin	Circuit	Circuit Function
1	15-RN2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RH6 (BK/OG)	Ground, switched
3	30-RP3 (RD)	Voltage supplied at all times (not overload protected)
5	15S-RP3 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C51

14K733

K163
PCM power relay

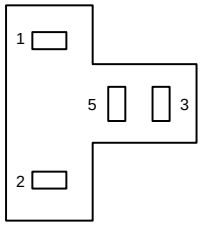

F04018

Pin	Circuit	Circuit Function
1	15-RH9 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31-LE12 (BK) + 31-RH9 (BK)	Ground
3	30-RH10 (RD)	Voltage supplied at all times (not overload protected)
5	15-RN3 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C52

14K733

K22
Starter relay

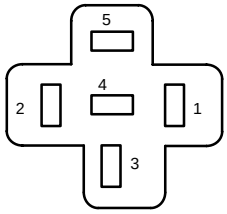

F05018

Pin	Circuit	Circuit Function
1	50-BB11A (GY/WH)	Voltage, ignition switch in Start (not overload protected)
2	31S-BB12 (BK/YE)	Ground, switched
3	30-BB10 (RD)	Voltage supplied at all times (not overload protected)
4	–	not used
5	50-BB10 (GY/BK)	Voltage, ignition switch in Start (not overload protected)