Seat adjust switch, passenger side front

Schematic

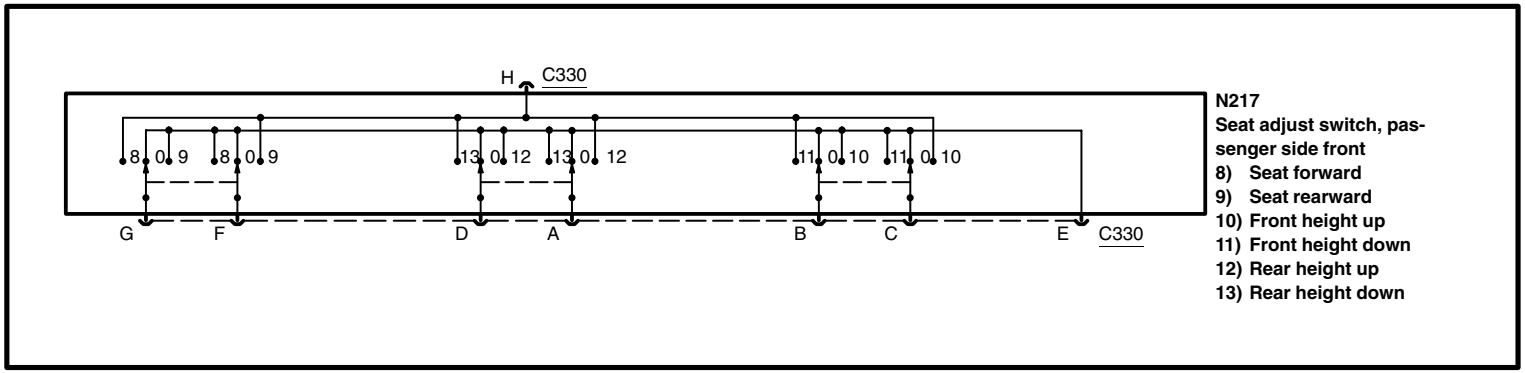

Terminals

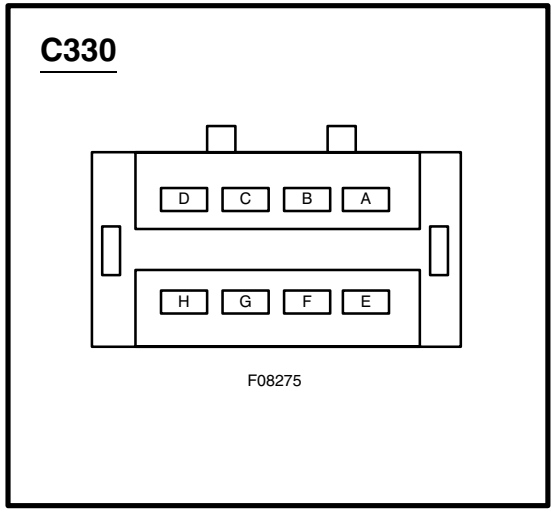

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	E and A, B, C, D, E, F, G	Rest	Closed circuit
	E and H	Rest	Open circuit
Tilt, front	C and H	Up	Closed circuit
	B and H	Down	Closed circuit
Tilt, rear	A and H	Up	Closed circuit
	D and H	Down	Closed circuit
Forward/rearward circuit	G and H	Forward	Closed circuit
	F and H	Rearward	Closed circuit