C278 (BK)

14401

Brake pedal position switch (13480)

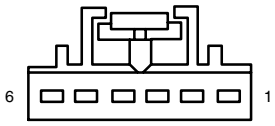

F06293

Pin	Circuit	Circuit function
1	10 (LG/RD)	Voltage supplied at all times (overload protected)
2	511 (LG)	Brake pedal position switch (13480), to stoplamps
3	–	not used
4	–	not used
5	729 (RD/WH)	Voltage supplied at all times (overload protected)
6	810 (RD/LG)	Brake pedal position switch (13480), output

C280 (GY)

14401/14B079

Traction control switch

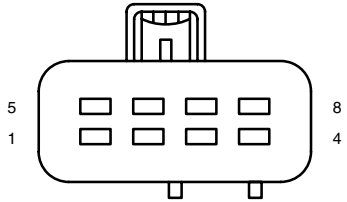

F08088

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	959 (GY)	Traction assist switch, feed, to ABS control module
3	–	not used
4	960 (BK/LB)	Traction assist On/Off indicator, to ABS control module
5	–	not used
6	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
7	57 (BK)	Ground
8	19 (LB/RD)	Illumination, Power

C284 (BK)

14401

Four–wheel drive switch

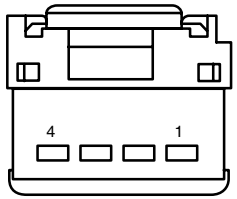

F04321

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	682 (DB)	Four–wheel drive switch, Signal return
3	780 (DB)	Four–wheel drive switch, position sense
4	19 (LB/RD)	Illumination, Power