C603 (GY)

14630

Door lock actuator, right front

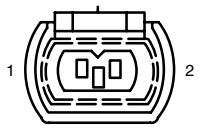

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C606 (BN)

14A005

Door entry lamp, right front (13776)

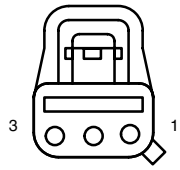

F03187

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	–	not used
3	57 (BK)	Ground

* Late production

C605 (GN)

14A005

Door lock switch, passenger side (14028)

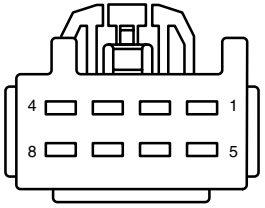

F08217

Pin	Circuit	Circuit function
1	–	not used
2	119 (PK/YE)	Door lock switch, input
3	57 (BK)	Ground
4	57 (BK)	Ground
5	1499 (PK/LG)	Accessory delay relay, output
	*194 (PK)	Accessory delay relay, output
6	120 (PK/LG)	Door unlock, switch, input
7	–	not used
8	–	not used

C608 (BK)

14630

Power window motor, passenger side front (23394)

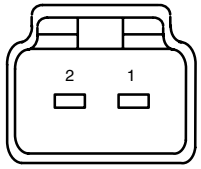

F02381

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Down
2	334 (RD/YE)	Window motor, feed, Up