C175c

12B637

A147
Powertrain Control
Module (PCM)

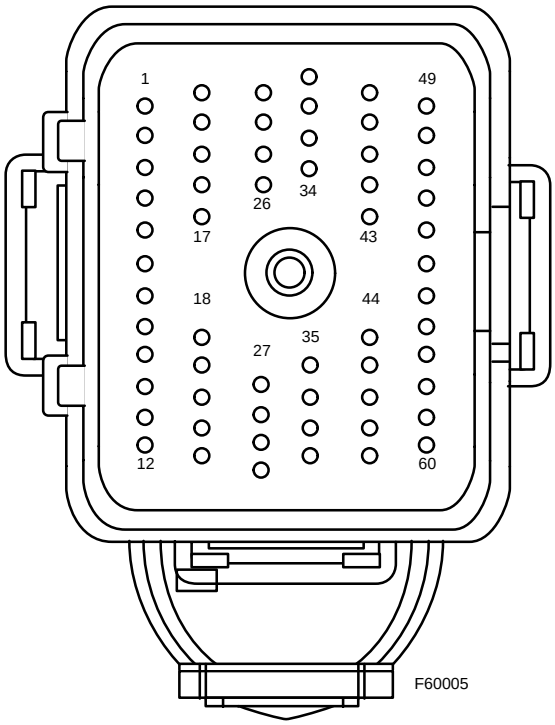

Pin	Circuit	Circuit Function
1	91S-RR6 (BN/RD)	Ground, Switched
2	91S-RL10 (BN/WH)	Ground, Switched
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	91S-RJ14 (BN)	Ground, Switched
8	91S-RJ15 (BN/RD)	Ground, Switched
9	91S-RL19 (BN)	Ground, Switched
10	–	not used
11	91S-RL14 (BN/GN)	Ground, Switched
12	91S-RR10 (BN/WH)	Ground, Switched
	91S-RR8 (BN/GN)	Ground, Switched
13	91S-RR8 (BN/GN)	Ground, Switched
	91S-RR7 (BN/BU)	Ground, Switched
14	91S-RL11 (BN)	Ground, Switched
15	–	not used
16	91S-RL7 (BN/GN)	Ground, Switched

Pin	Circuit	Circuit Function
17	9-RE8 (BN)	Sensor signal return (reference/ ground)
18	–	not used
19	–	not used
20	7-RN11 (YE/BK)	Voltage D.C. supplied at all times (sensor)
21	91S-RL15 (BN/YE)	Ground, Switched
22	91S-RR7 (BN/BU)	Ground, Switched
	91S-RR9 (BN/YE)	Ground, Switched
23	91S-RR9 (BN/YE)	Ground, Switched
	91S-RR6 (BN/RD)	Ground, Switched
24	91S-RL12 (BN/RD)	Ground, Switched
25	–	not used
26	–	not used
27	–	not used
28	10-BA25 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
29	91S-RL16 (BN/WH)	Ground, Switched
	91S-RL20 (BN/YE)	Ground, Switched

Pin	Circuit	Circuit Function
30	91S-RR11 (BN)	Ground, Switched
	91S-RR10 (BN/WH)	Ground, Switched
31	91S-RR5 (BN)	Ground, Switched
32	91S-RJ13 (BN/BU)	Ground, Switched
33	–	not used
34	–	not used
35	–	not used
36	91S-RG1 (BN)	Ground, Switched
37	91S-RL17 (BN)	Ground, Switched
38	91S-RR12 (BN/RD)	Ground, Switched
39	10-RJ18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
40	8-RJ33 (WH/VT)	Sensor signal
41	8-RJ7 (WH/BU)	Sensor signal
42	10-RJ18 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
43	10-RJ19 (GY/RD)	Signal 2 (Y–direction, reverse, downward)

Pin	Circuit	Circuit Function
44	8-RJ15 (WH/RD)	Sensor signal
45	8-RJ14 (WH)	Sensor signal
46	–	not used
47	–	not used
48	–	not used
49	8-RJ11 (WH/GN)	Sensor signal
50	8-BA25 (WH/RD)	Sensor signal
51	8-RJ18 (WH/BK)	Sensor signal
52	8-RJ19 (WH/RD)	Sensor signal
53	8-RJ3 (WH/VT)	Sensor signal
54	–	not used
55	10-RJ4 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
56	8-RJ4 (WH/RD)	Sensor signal
57	8-RJ28 (WH)	Sensor signal
58	–	not used
59	–	not used
60	–	not used