C149

14A584

M68
Door lock motor,
passenger side

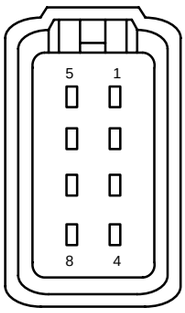

F08083

Pin	Circuit	Circuit Function
1	33-AA59B (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59B (WH/BK)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	31S-AA64B (BK/GN)	Ground, switched
5	–	not used
6	31-AA58B (BK)	Ground
7	–	not used
8	31S-AA63B (BK/OG)	Ground, switched

C150

14A584

M78
Door lock motor
driver side rear

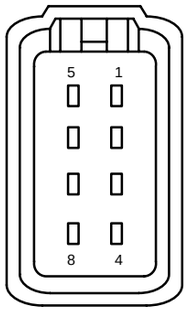

F08083

Pin	Circuit	Circuit Function
1	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used

C151 (BK)

14A584

M77
Door lock motor
passenger side rear

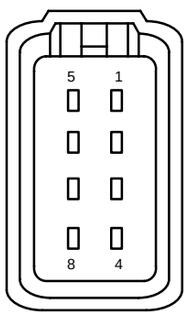

F08083

Pin	Circuit	Circuit Function
1	33-AA59D (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59D (WH/BK)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used