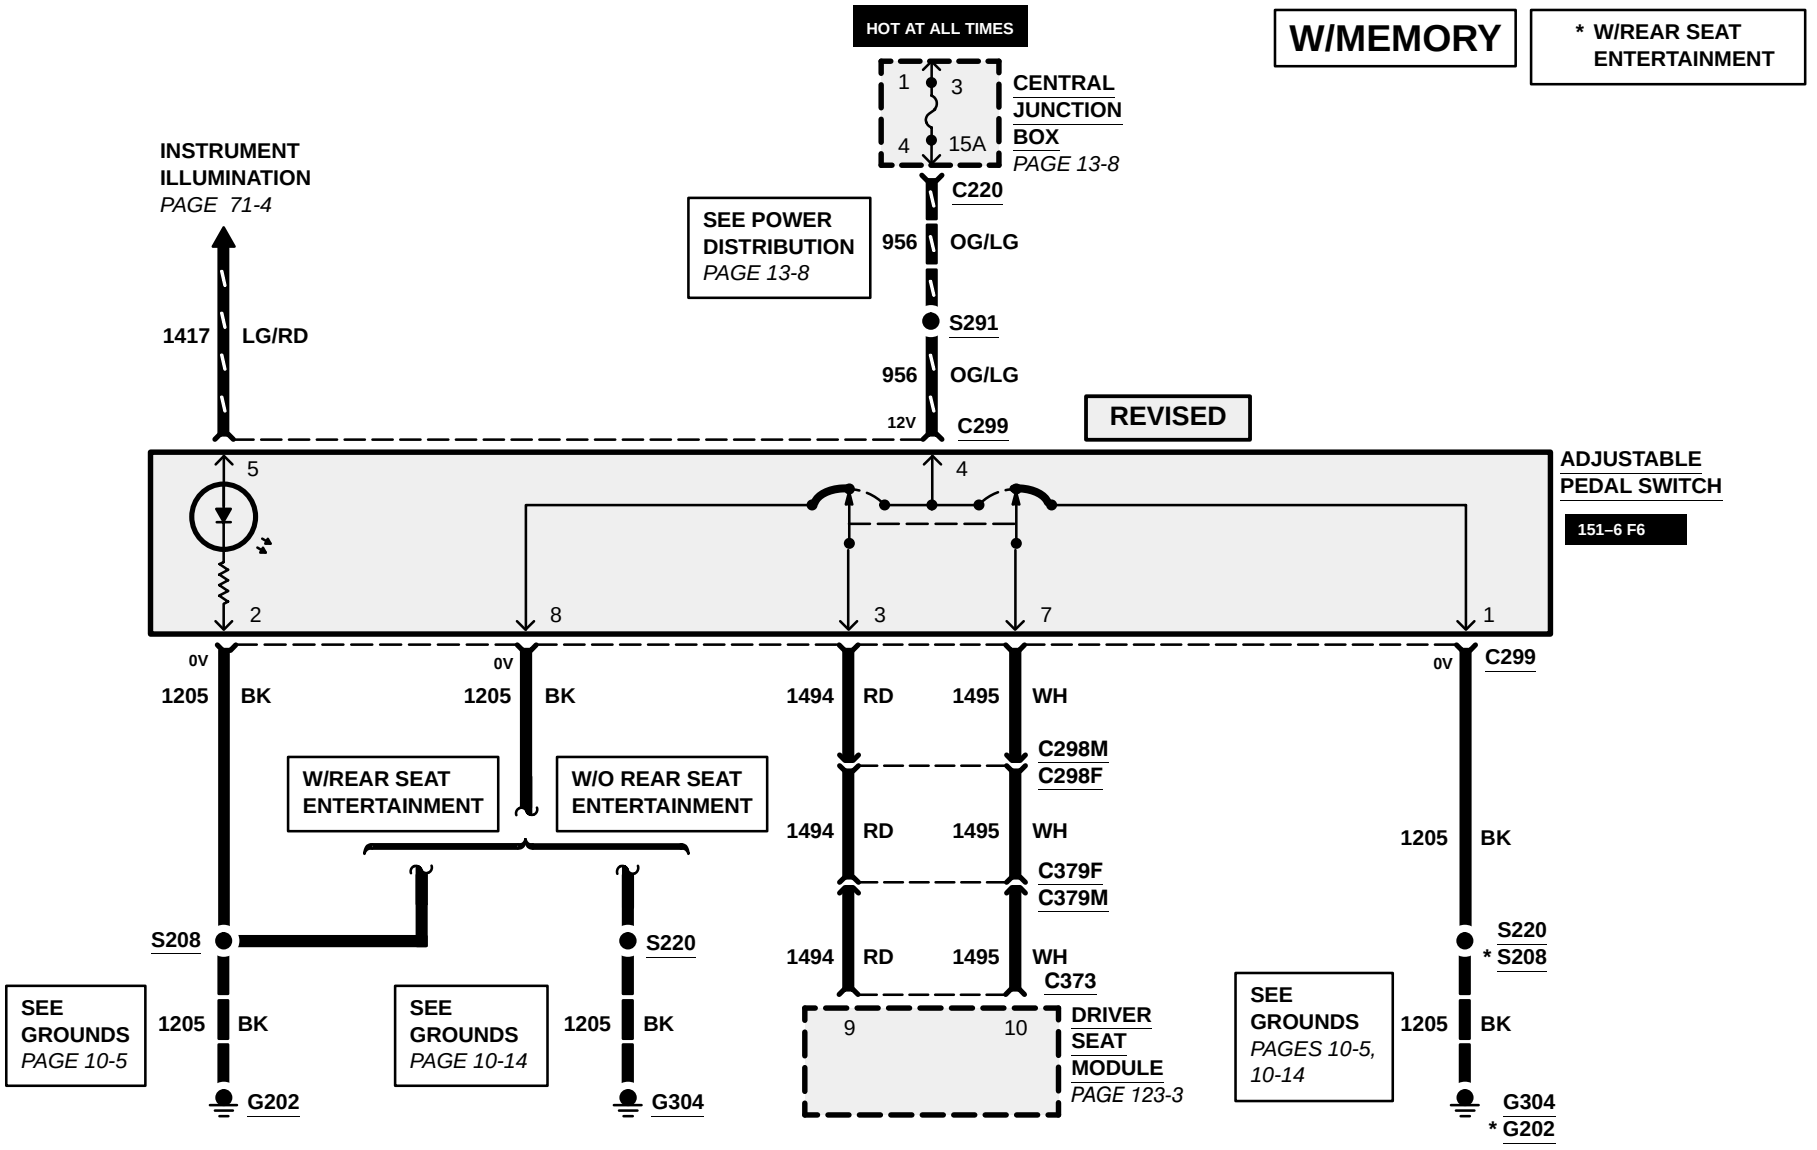
W/MEMORY
* W/REAR SEAT ENTERTAINMENT
HOT AT ALL TIMES
1
3
4
15A
CENTRAL JUNCTION BOX
PAGE 13-8
INSTRUMENT ILLUMINATION
PAGE 71-4
SEE POWER DISTRIBUTION
PAGE 13-8
C220
956 OG/LG
S291
956 OG/LG
12V
C299
1417 LG/RD
REVISED
ADJUSTABLE PEDAL SWITCH
151–6 F6
5
4
2
8
3
7
1
0V
1205 BK
0V
1205 BK
1494 RD
1495 WH
C298M
C298F
1494 RD
1495 WH
C379F
C379M
1494 RD
1495 WH
C373
9
10
DRIVER SEAT MODULE
PAGE 123-3
0V
C299
1205 BK
S220
* S208
1205 BK
* G304
* G202
W/REAR SEAT ENTERTAINMENT
W/O REAR SEAT ENTERTAINMENT
S208
S220
SEE GROUNDS
PAGE 10-5
1205 BK
G202
SEE GROUNDS
PAGE 10-14
1205 BK
G304
SEE GROUNDS
PAGES 10-5, 10-14