Window adjust switch, left rear (14A412)

Schematic

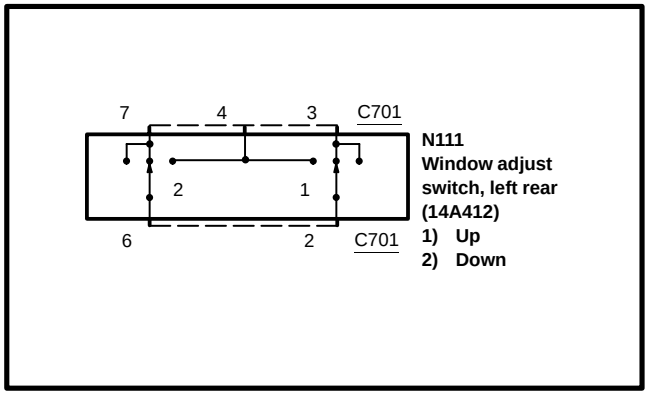

Terminals

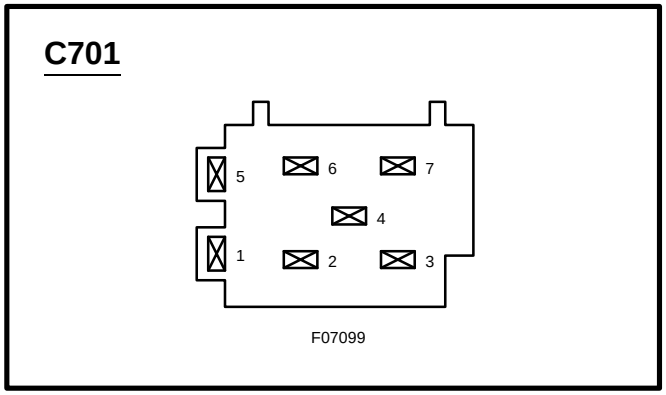

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Up Switch Circuit	4 and 2	Up	Closed circuit
	6 and 7	Up	Open circuit
Down Switch Circuit	4 and 6	Down	Closed circuit
	2 and 3	Down	Open circuit
Window adjust switches	7 and 6	Rest	Closed circuit
	3 and 2	Rest	Closed circuit