C707

14632

N431
Sliding door contact switch, left

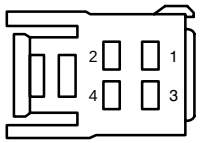

F04106

Pin	Circuit	Circuit function
1	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Lock
2	825 (TN/LG)	Speaker, right rear (18808) +
3	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock
4	803 (BN/PK)	Speaker, right rear (18808) –

C708

14632

M212
Door lock actuator assembly, left sliding door

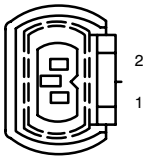

F02116

Pin	Circuit	Circuit function
1	1385 (LG)	Power sliding door motor, return
2	1386 (OG)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH

C709

14632

N600
Latch reverse actuator, left power sliding door

F02482

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	1252 (GY/RD)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH

C711

14632

N333
Detent switch, LH

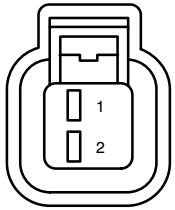

F02069

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	1227 (WH)	Detent switch, RH, to, Module, power sliding door, RH side

C802

14632

Y19
Speaker, right rear (18808)

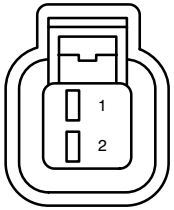

F02069

Pin	Circuit	Circuit function
1	825 (TN/LG)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –