C201g

14A005

Front Electronic Module (FEM) (13C788)

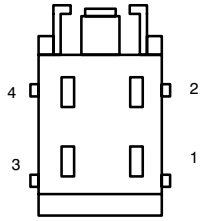

F04137

Pin	Circuit	Circuit function
1	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
2	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open
3	30-AJ80 (RD/OG)	Voltage supplied at all times (not overload protected)
4	31-AJ80 (BK/OG)	Ground

C202

14401

Multifunction switch

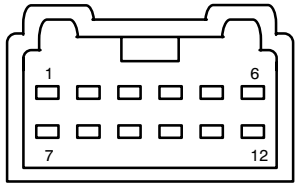

F12189

Pin	Circuit	Circuit function
1	31S-XL50 (BK/OG)	Ground, switch
2	31-KA19 (BK/RD)	Ground
3	31S-XL53 (BK/WH)	Ground, switch
4	31S-XL51 (BK/GN)	Ground, switch
5	31S-KA19 (BK/RD)	Ground, switch
6	31S-XL52 (BK/RD)	Ground, switch
7	8-LG43 (WH/VT)	Sensor signal
8	9-LG43 (BN/WH)	Sensor signal return (reference/ground)
9	8-LE14 (WH/BU)	Sensor signal
10	–	not used
11	–	not used
12	–	not used