C525

14A005

A172
Door lock unit, driver side front
(5421813)

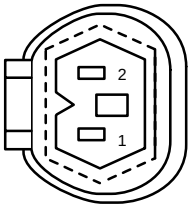

F02227

Pin	Circuit	Circuit Function
1	33-AA10 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA11 (WH/VT)	Switched between: Battery voltage, Ground or Open

C526

14A005

N239
Door ajar switch, driver side front
(14018)

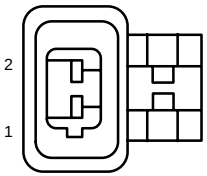

F02117

Pin	Circuit	Circuit Function
1	30S-GL46 (RD/YE)	Voltage supplied at all times (not overload protected), switch
2	31-AA58 (BK/YE)	Ground

C601

14A005

M260
Exterior rear view mirror, right



F03079

Pin	Circuit	Circuit Function
1	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open
3	33-AD10 (YE/BK)	Switched between: Battery voltage, Ground or Open

C602

14A005

N240
Door ajar switch, passenger side front
(14018)

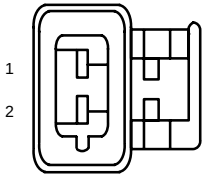

F02379

Pin	Circuit	Circuit Function
1	30S-GL47 (RD/BU)	Voltage supplied at all times (not overload protected), switch
2	31-AA58 (BK)	Ground