R3.15

14A488

Trailer tow
reversing lamps relay



Pin	Circuit	Circuit Function
1	140 (BK/PK)	Voltage supplied to coil in reverse
2	1205 (BK)	Coil ground
3	1043 (DG/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	963 (BK/LG)	Trailer tow connector, reversing lamps

R3.18

14A488

Liftgate lock actuator



Pin	Circuit	Circuit Function
1	202 (OG/LG)	Voltage supplied at all times (overload protected)
2	664 (YE/LG)	Coil ground to security module
3	202 (OG/LG)	Voltage supplied at all times (overload protected)
4	–	not used
5	77 (DB/YE)	Relay switched solenoid actuator feed

R3.19

14A488

Trailer tow
parking lamp relay

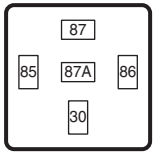

Pin	Circuit	Circuit Function
85	14 (BN)	Power, exterior lamps
86	1205 (BK)	Coil ground
87	962 (BN/WH)	Trailer to relay, switched output
87A	–	not used
30	1043 (DG/YE)	Trailer tow relay - fused feed

R3.20

14A488

Trailer tow
battery charge relay

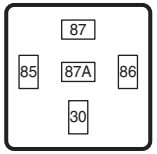

Pin	Circuit	Circuit Function
85	1003 (GY/YE)	Coil feed in run/start
86	1205 (BK)	Coil ground
87	49 (OG)	Relay switch voltage in run/start (overload protected)
87A	–	not used
30	175 (BK/YE)	voltage supplied at all times (overload protected)

R3.22

14A488

Puddle lamp relay



Pin	Circuit	Circuit Function
1	1003 (GY/YE)	Voltage supplied in run/start (overload protected)
2	1205 (BK)	Coil ground
3	53 (BK/LB)	Interior lamp relay, switched power output
4	55 (BK/PK)	Puddle lamp, output
5	–	not used

R4.64

14398

HID headlamp relay, right



Pin	Circuit	Circuit Function
1	13 (RD/BK)	Voltage supplied with headlamps on
2	1205 (BK)	Coil ground
3	1336 (LG/WH)	Voltage supplied at all times (overload protected)
4	–	not used
5	161 (DG/OG)	Relay switched output to right low beam