C2060

14401

N465
Rear window adjust switch

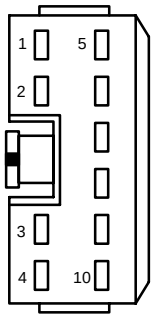

F10040

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	404 (VT/LG)	Window motor
5	57 (BK)	Ground
6	570 (BK/WH)	Ground
7	407 (TN/BK)	Window motor
8	235 (RD/BK)	Instrument illumination, input
9	405 (VT/LB)	Window motor
10	–	not used

C2062

14401

K130
Door lock relay

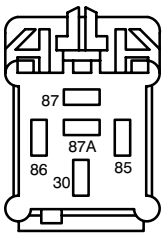

F05062

Pin	Circuit	Circuit Function
87	171 (BK/WH)	Voltage supplied at all times (overload protected)
87A	57 (BK)	Ground
85	171 (BK/WH)	Voltage supplied at all times (overload protected)
86	119 (PK/YE)	Door lock relay, control
30	117 (PK/BK)	Door lock, output

C2061

14401

K129
Door unlock relay

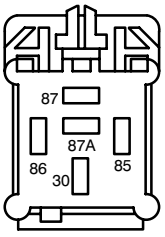

F05062

Pin	Circuit	Circuit Function
87	171 (BK/WH)	Voltage supplied at all times (overload protected)
87A	57 (BK)	Ground
85	171 (BK/WH)	Voltage supplied at all times (overload protected)
86	120 (PK/LG)	Door unlock relay, control
30	118 (PK/OG)	Door unlock, output

C2063

14401

K131
Driver door unlock relay

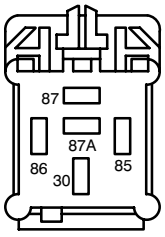

F05062

Pin	Circuit	Circuit Function
87	171 (BK/WH)	Voltage supplied at all times (overload protected)
87A	118 (PK/OG)	Door unlock, output
85	171 (BK/WH)	Voltage supplied at all times (overload protected)
86	129 (LG)	Driver door unlock relay, output
30	163 (RD/OG)	Driver door unlock relay, switched power