# Headlamp switch, Exterior lamps

## Schematic

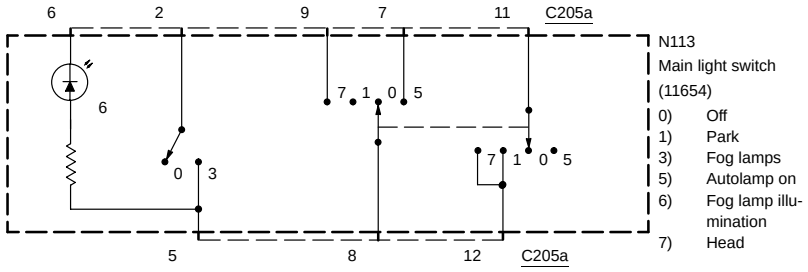


## Terminals

**C205a**

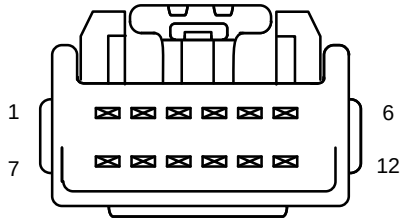


F12101

## Component testing procedure

| Circuit to test | Connect self–powered test light or ohm-meter to terminals | Move switch to these positions | A good switch will indicate |
|---|---|---|---|
| **Headlamp** | 9 and 8 | Off | Open circuit |
| | | Head | Closed circuit |
| | | Park | Open circuit |
| | | Autolamps | Open circuit |
| **Park lamps** | 11 and 12 | Off | Open circuit |
| | | Head | Closed circuit |
| | | Park | Closed circuit |
| | | Autolamps | Open circuit |
| **Autolamps** | 7 and 8 | Off | Open circuit |
| | | Head | Open circuit |
| | | Park | Open circuit |
| | | Autolamps | Closed circuit |
| **Fog lamps** | 2 and 5 | On | Closed circuit |
| | | Off | Open circuit |