C428 (GY)

14A005

Luggage compartment lamp (13A756)

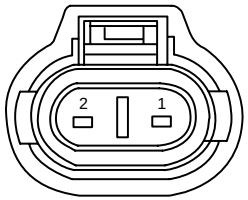

F02495

Pin	Circuit	Circuit function
1	1092 (PK/OG)	Luggage compartment lamp (13A756), Power, feed
2	486 (BN/WH)	Luggage compartment lamp (13A756) Switched, Ground

C430

14A227

Luggage compartment lid release solenoid (5443252)



F03303

Pin	Circuit	Circuit function
1	486 (BN/WH)	Luggage compartment lamp (13A756) Switched, Ground
2	84 (VT/YE)	Luggage compartment switch, Power
3	57 (BK)	Ground

C431 (BK)

14407

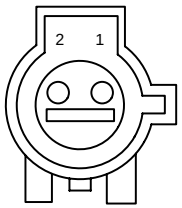

F0289

14405

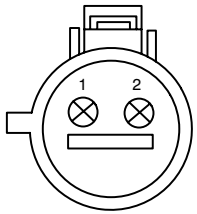

F02529

(1) 57 (BK)
(2) 787 (PK/BK)

C432 (GY)

14A032

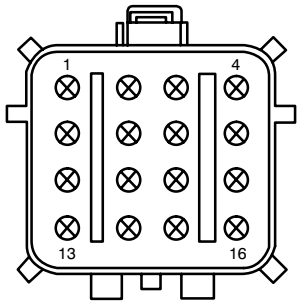

F16141

(1)	876 (DG/LG)	(9)	552 (YE/RD)
(2)	878 (PK/YE)	(10)	713 (WH)
(3)	1087 (OG)	(11)	719 (DB)
(4)	724 (LB/YE)	(12)	710 (LB)
(5)	709 (GY)	(13)	726 (LG)
(6)	728 (WH/OG)	(14)	57 (BK)
(7)	708 (DG)	(15)	57 (BK)
(8)	553 (VT/LB)	(16)	57 (BK)

14A411

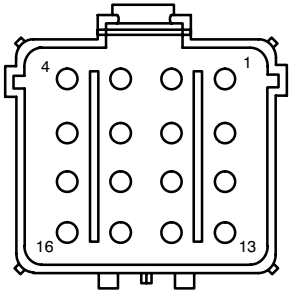

F16034

(1)	(DG/LG)	(9)	(YE/RD)
(2)	(PK/YE)	(10)	(WH)
(3)	(OG)	(11)	(DB)
(4)	(LB/YE)	(12)	(LB)
(5)	(GY)	(13)	(LG)
(6)	(WH/OG)	(14)	(BK)
(7)	(DG)	(15)	(BK)
(8)	(VT/DB)	(16)	(BK)