C221 (BK)

M216
Blend door actuator, front

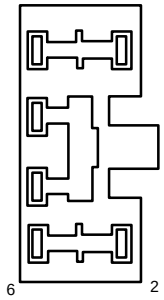

F06133

Pin	Circuit	Circuit Function
1	HA20 (BU/BK)	Air temperature door variable resistor +
2	HA21 (OG)	Air temperature door variable resistor, wiper
3	HA22 (BU/RD)	Air temperature door variable resistor –
4	HA23 (RD/WH)	Blend door actuator, front
5	HA24 (RD/BK)	Blend door actuator, front
6	–	not used

C222 (WH)

14A103

N405
Transmission control switch



F02129

Pin	Circuit	Circuit Function
1	ZY39 (GN/OG)	Transaxle Control Module (TCM), to transmission overdrive cancel switch
2	ZE61 (BK)	Ground

C224a (BK)

14A103

N420
Multifunction switch

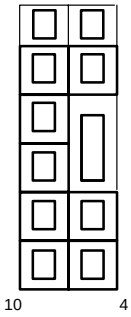

F10069

Pin	Circuit	Circuit Function
1	WA08 (PK)	Wiper/washer, input
2	WA07 (WH)	Wiper/washer, return
3	WA09 (GN)	Wiper/washer, input
4	LD04 (PK/BU)	Tail lamp relay, switched output
5	–	not used
6	–	not used
7	LAE3 (BK)	Ground
8	LA21 (BN)	Headlamp flasher, switch sense
9	LAE4 (BK)	Ground
10	LA23 (LG/RD)	High beam lamp, switch sense

C224b (BK)

14N103

N420
Multifunction switch

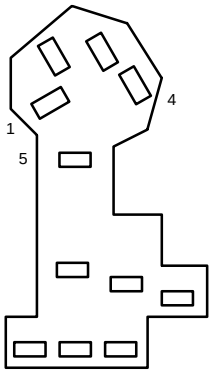

F11011

Pin	Circuit	Circuit Function
1	LB11 (RD/WH)	Turn lamps, Right, switched power
2	LD05 (GN/RD)	Turn lamp, right front, switch sense
3	LD06 (GN/WH)	Turn lamp, left front, switch sense
4	LB12 (RD/GN)	Turn lamps, Left, switched power
5	LB05 (VT)	Turn Signal and Hazard Lamps, switched power