C180

12B637

B41
Camshaft position sensor

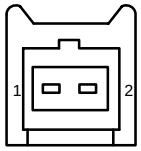

F02012

Pin	Circuit	Circuit Function
1	282 (DB/OG)	Camshaft position sensor, input
2	359 (GY/RD)	signal, return

C181

12B637

Y108
Injector 1

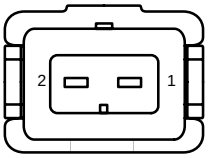

F02089

Pin	Circuit	Circuit Function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182

12B637

Y109
Injector 2

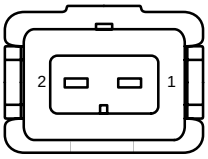

F02089

Pin	Circuit	Circuit Function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183

12B637

Y110
Injector 3

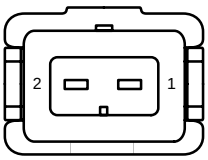

F02089

Pin	Circuit	Circuit Function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184

12B637

Y111
Injector 4

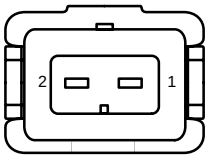

F02089

Pin	Circuit	Circuit Function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C185

12B637

Y112
Injector 5

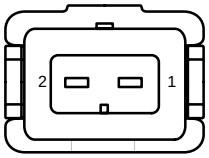

F02089

Pin	Circuit	Circuit Function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186

12B637

Y113
Injector 6

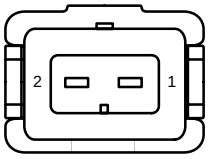

F02089

Pin	Circuit	Circuit Function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)