C2051

K50
One–touch window relay

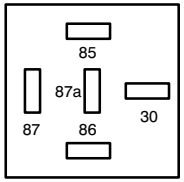

F05051

Pin	Circuit	Circuit function
30	–	switched power
85	–	switched power
86	–	Coil, control
87	–	Accessory delay, input
87a	–	Ground

C2075

K126
Accessory delay relay

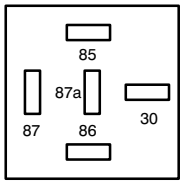

F05051

Pin	Circuit	Circuit function
30	–	Voltage supplied at all times (overload protected)
85	–	Coil, control
86	–	switched power
87	–	Accessory delay, feed
87a	–	not used

C2089

14401

N449
Adjustable pedal switch

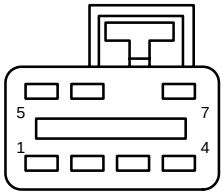

F07085

Pin	Circuit	Circuit function
1	1492 (LB/RD)	memory, Adjustable pedal switch, Rearward
2	956 (OG/LG)	Voltage supplied at all times (overload protected)
3	875 (BK/LB)	Ground
4	57 (BK)	Ground
5	19 (LB/RD)	Voltage supplied at all times (overload protected)
6	875 (BK/LB)	Ground
7	1493 (PK/BK)	memory, Adjustable pedal switch, Forward

C2095

14B079

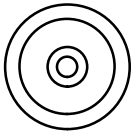
F01051

10E938


F01119

Pin	Circuit	Circuit function
1	(BK)	Coaxial lead