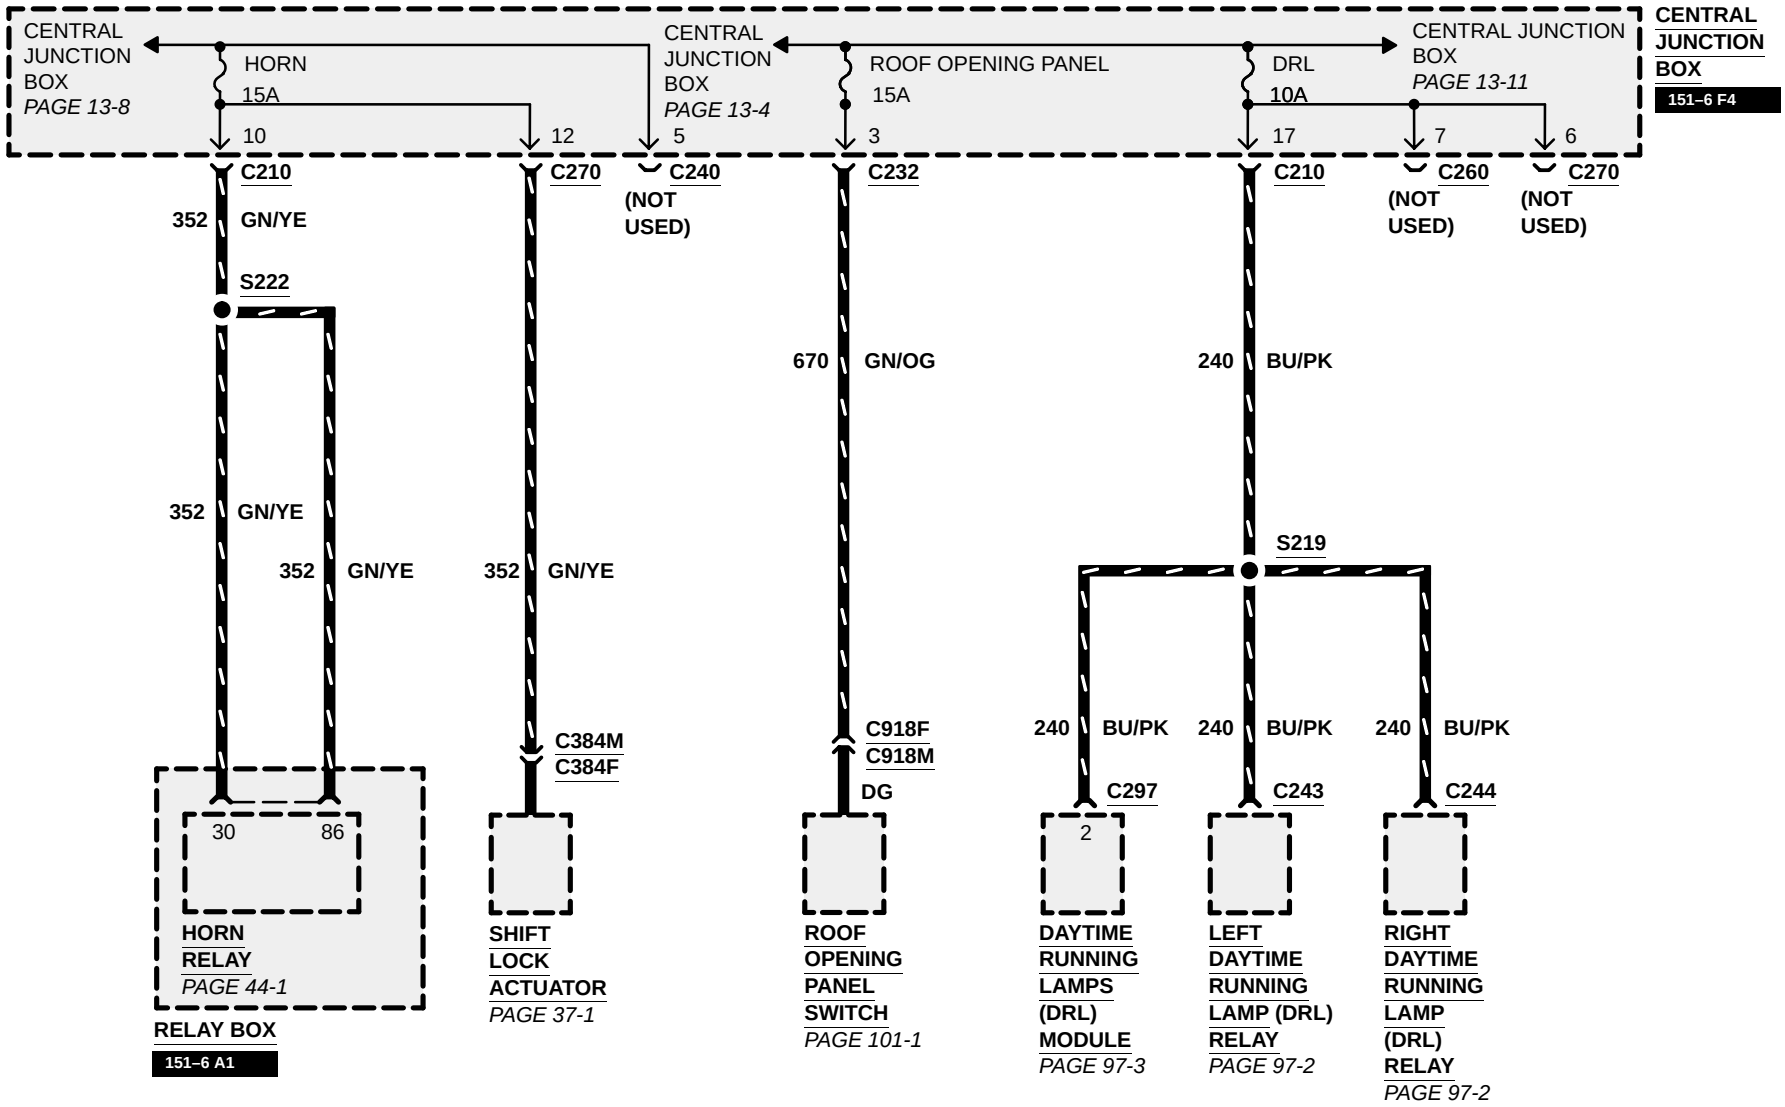
CENTRAL JUNCTION BOX
PAGE 13-8
HORN
15A
CENTRAL JUNCTION BOX
PAGE 13-4
ROOF OPENING PANEL
15A
DRL
10A
CENTRAL JUNCTION BOX
PAGE 13-11
CENTRAL JUNCTION BOX
151–6 F4
10
12
5
3
17
7
6
C210
C270
C240
(NOT USED)
C232
C210
C260
(NOT USED)
C270
(NOT USED)
352 GN/YE
S222
670 GN/OG
240 BU/PK
352 GN/YE
352 GN/YE
352 GN/YE
S219
C384M
C384F
C918F
C918M
DG
240 BU/PK
240 BU/PK
240 BU/PK
C297
C243
C244
30
86
2
HORN RELAY
PAGE 44-1
RELAY BOX
151–6 A1
SHIFT LOCK ACTUATOR
PAGE 37-1
ROOF OPENING PANEL SWITCH
PAGE 101-1
DAYTIME RUNNING LAMPS (DRL) MODULE
PAGE 97-3
LEFT DAYTIME RUNNING LAMP (DRL) RELAY
PAGE 97-2
RIGHT DAYTIME RUNNING LAMP (DRL) RELAY
PAGE 97-2